

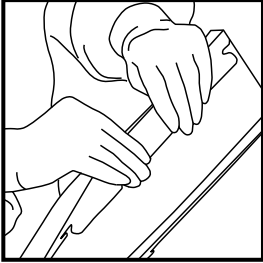


# EasyCurve™ Mop User's Guide


Installation instructions for Contec's EasyCurve mop head and frame (2724)

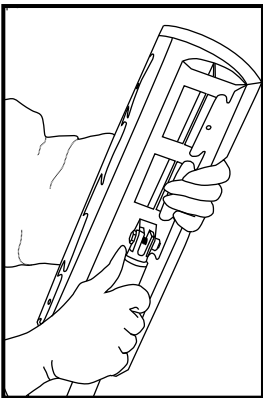

**Step 2/ Creasing the attachment tabs**

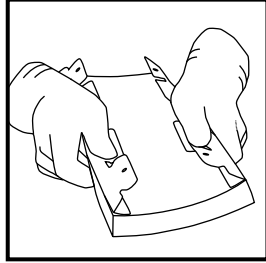


**Step 3/ Placing frame into the first creased attachment tab**

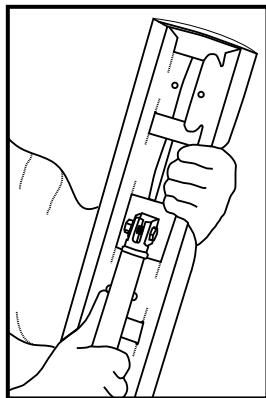

**Step 4 & 5/ Snapping plastic tabs into metal frame**

## EasyCurve Mop Head Installation:

1. Remove the mop head from its packaging. Properly dispose of packaging materials.
2. Prepare the mop head by folding the attachment tabs (on both sides of the mop head) along the perforations, and toward the center of the mop. Be sure to crease completely along both perforations, as shown in Step 2 drawing at left.
3. Holding the mop head vertically in one hand, with the fabric face of the mop head on the palm and the edge of the mop head in the curl of the fingers, place the edge of the curved metal frame into the corresponding crease of the folded attachment tab as shown in Step 3 drawing at left.
4. Use fingers to press the plastic tabs into the corresponding slots in the metal frame. Be sure that both sides of each tab snap fully behind the edges of the slots. Engage tabs completely on this side of the mop head.
5. To make installation easier, swivel the entire mop head (and metal frame) end-for-end so the opposite (un-installed) side of the mop is facing away from user. Repeat tab insertion into curved frame as before until all tabs are inserted as shown in Step 4 & 5 drawing at left.

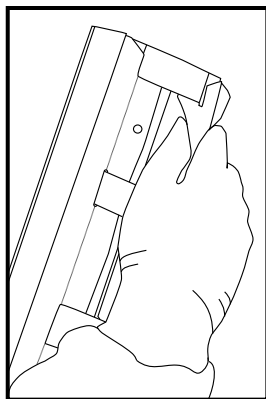

**Mop head removal**

## EasyCurve Mop Head Removal:

To remove mop head, lift all the tabs from the slots in the curved metal frame and remove, as shown in drawing at left.