
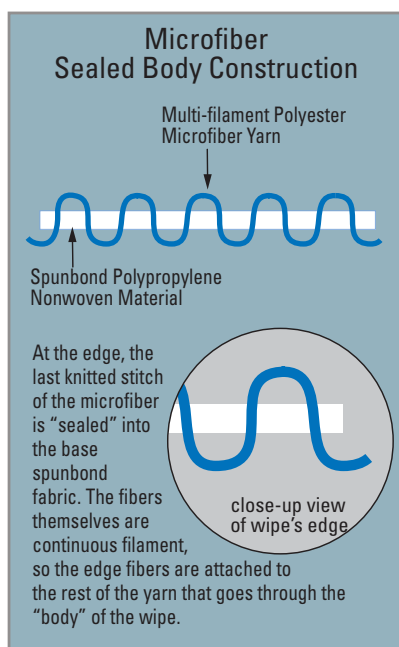


# QuickKlean™ Mopping System

Lightweight mop and revolutionary microfiber wipes combine for unprecedented performance

Contec's QuickKlean mop is changing the level of clean for the USP<797> market. The combination of the lightweight, easy to maneuver hardware and particle pick-up capacity of the microfiber wipes deliver unprecedented performance.

The QuickKlean mop head frame is available in durable plastic. The foam mop head is laminated with knitted polyester and is abrasion resistant. The cleanroom laundered microfiber wipe delivers the maximum amount of microfiber to pick-up and retain particles, dust and other contaminants. Compatible with a wide range of disinfectants, chemicals and solutions, Contec's QuickKlean mop offers users a lightweight option for wet or dry floor, wall, and ceiling cleaning.

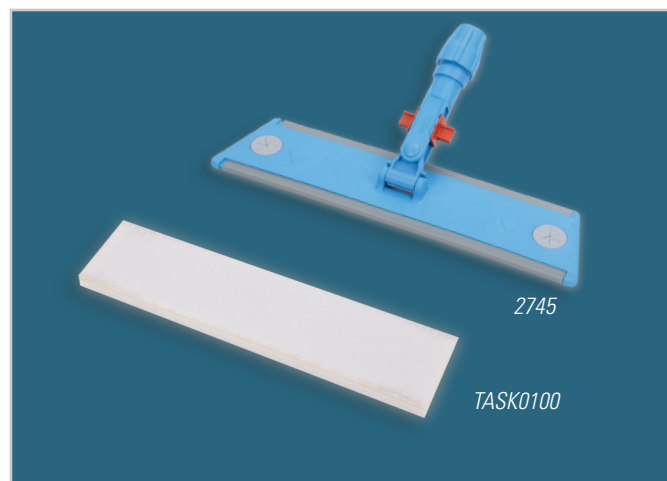


Features	Benefits
<b>USP&lt;797&gt; compliant*</b>	<ul style="list-style-type: none"> <li>Meets all requirements for floor, wall and ceiling cleaning</li> </ul>
<b>Durable and lightweight hardware</b>	<ul style="list-style-type: none"> <li>Withstands daily use with little fatigue on user</li> </ul>
<b>Foam mop head laminated with knitted polyester</b>	<ul style="list-style-type: none"> <li>Abrasion resistant</li> <li>Compatible with a wide range of disinfectants and cleaners</li> <li>Safe for use with all disinfectants including bleach and quaternary ammonium</li> </ul>
<b>Disposable microfiber wipes</b>	<ul style="list-style-type: none"> <li>Non-shedding with excellent cleaning efficiency for wet and dry cleaning</li> <li>Ideal for gross contamination deposited on equipment, floors, walls, and ceilings</li> <li>Cleanroom laundered to enhance cleanliness</li> </ul>

\*All cleaning materials, such as wipers, sponges, and mops shall be nonshedding, preferably composed of synthetic microfibers (page 54 Revision Bulletin <797> Pharmaceutical Compounding - Sterile Preparations)

Part No.	Description	Packaging
LWMM0400	QuickKlean <797> Kit- 2 bags of 50 microfiber wipes, 6 TASK0100 mop heads	1 kit/case
LWMM0300	Microfiber wipes, laundered, 10"x18" (25x46cm)	100 /bag; 4 bags/case
TASK0100	QuickKlean foam mop head	4 /bag; 8 bags/case
2745	QuickKlean flat mop head frame, 16" (40cm), blue polypropylene	1/case
2725E	QuickConnect handle, stainless, 60" (152cm)	1/case
2769/67-KIT	Two 5 gallon (20L) bucket system w/ casters and stainless steel flat wringer sieve (part no. 2689)	1/case



2769/67-KIT includes 2689

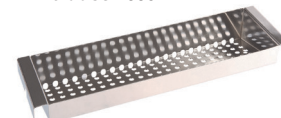

# QuickKlean™ Mopping System

## Installation Instructions

Installation instructions for Contec part numbers 2745, 2725E, TASK0100, LWMM0300, LWMM0400

The QuickKlean™ Mopping System, coupled with Contec's revolutionary microfiber wipes, is the solution to your USP <797> mopping needs. This system can be used for daily floor maintenance as well as monthly ceiling and wall cleaning.

### Daily Floor Cleaning and Disinfection:

1. Attach Task0100 foam mop head to the bottom of the blue QuickKlean frame
2. Place the mop head onto one disposable microfiber wipe. Center the mop head in the middle of the wipe. The length of the mop and wipe should be the same.
3. Wrap the wipe to the top of the mop frame and push through the "keepers" on the back. The "keepers" will hold the wipe in place.
4. Liberally spray the mop head with the approved disinfectant/cleaner or immerse in double bucket system and then mop.
5. Change the disposable wipe as needed. It is recommended that the wipe be changed when visibly soiled.\*
6. Repeat the process with Contec Sterile IPA or DI water to remove any residue from disinfectant/cleaner if needed.
7. Discard the soiled wipe after use.
8. Discard the TASK0100 foam mop head if visibly soiled. Do not use more than 7 days.\*\*

\* This may be more frequent during the first cleaning due to the microfiber wipe's ability to clean soil that other systems have left behind.

\*\* When using accelerated hydrogen peroxide, phenolic, quaternary ammonium, or IPA based disinfectants, the mop head should be used no more than seven days and should be replaced sooner if visibly soiled. The mop head should be used no more than one day if used in conjunction with sodium hypochlorite (bleach) solutions.

### Monthly Ceiling & Wall Cleaning and Disinfection:

1. Repeat the steps outlined above. Due to the low soil load on these surfaces, you may or may not choose to use the microfiber wipe in conjunction with the TASK0100 foam mop head.
2. Discard the TASK0100 upon completion. Change the TASK0100 during the process if it becomes visibly soiled.

NOTE: 6% or greater bleach solution will discolor the TASK0100 foam mop head after a 24 hour period of time. It DOES NOT degrade the mop head.

Item No.	Description	Packaging	Purchase u/m
2745	QuickKlean mop head frame, blue	each	each
2725E	QuickConnect handle, stainless, 60" (152cm)	each	each
TASK0100	TASK0100 foam mop head w/ laminated polyester fabric	4/bag, 8 bags/case	case
LWMM0300	Disposable microfiber wipes, 10" x 18" (25 x 46cm)	100/bag, 4 bags/case	case
LWMM0400	QuickKlean <797> Kit, includes TASK0100 mop heads and microfiber wipes	6 mop heads, 100 wipes	case