

SHOP TOWEL REPLACEMENTS

for Digital and Offset applications

TuffStuff® GA Shop Towels

Rayon/polyester nonwoven shop towels

Designed for critical aerospace and automotive applications, this state-of-the-art nonwoven towel brings superior performance to the shop floor:

- Highly absorbent, very low linting towel for general cleaning around the press
- Perfect for cleaning blankets, rollers, and ink trays
- Use of new towels eliminates the chance of scratching blankets or rollers due to metal shavings or other contaminants found in rental towels
- No frayed or ragged edges that leave lint behind to cause hickies or other print defects
- Three-dimensional textured cleaning surface provides mechanical scrubbing ability to easily remove dried ink, embedded paper dust, sizing, and gum glaze off blankets and rollers
- 100% textile product (rayon/polyester), no paper pulp to fall out and leave lint behind



| | | |
|-----------|-------------------------------------------------------------------------|--------------------------------------|
| TSGA1213B | TuffStuff GA shop towels, blue, 12" x 13" (30.5 x 33cm), quarterfolded | 50 wipes/pack; 12 packs/case |
| TSGA1316B | TuffStuff GA shop towels, blue, 13" x 16" (33 x 40.6cm), quarterfolded | 50 wipes/pack; 12 packs/case |
| TSGA1213W | TuffStuff GA shop towels, white, 12" x 13" (30.5 x 33cm), quarterfolded | 50 wipes/pack; 12 packs/case |
| TSGA1316W | TuffStuff GA shop towels, white, 13" x 16" (33 x 40.6cm), quarterfolded | 50 wipes/pack; 12 packs/case |
| TSGA1217R | TuffStuff GA shop towels, 12" x 17" (30.5 x 43.2cm), perforated roll* | 275 wipes/roll; 1 roll/dispenser box |

* rolls fit on all competitive roll wipe dispensers

TuffStuff™

Polyester/cellulose critical task wipes for general applications

- Offers high strength, absorbency and versatility
- Low linting, solvent-resistant wipe maintains high strength, even when wet with any type of solvent used in pre-press or pressroom
- Binder-free blend of cellulose and polyester
- Exceptional performance at an economical price
- Packaged: single or double pop-up dispenser boxes; dispenser rolls; quarterfolded or stacked
- Greater strength and higher absorbency vs. KimWipes® or KleanWipes®



Applications

- Ideal for pre-press or pressroom equipment maintenance, institutional cleaning, production line maintenance and machine shops
- Also recommended for general and surface cleaning in paint, marine and aftermarket industries

| | | |
|----------|-----------------------------------------------------------------------------------------------|-----------------------------------------|
| TSWC1214 | TuffStuff creped wipes, white, 12" x 14" (30 x 35.5cm), roll in dispenser box | 500 wipes/roll; 1 roll/dispenser box |
| TSWC0917 | TuffStuff premium creped wipes, white, 9" x 16.5" (22.9 x 42cm), pop-up dispenser box | 100 wipes/box; 8 boxes/case |
| TSWC1217 | TuffStuff premium creped wipes, white, 12" x 16.5" (30.5 x 42cm), double pop-up dispenser box | 125 wipes/box; 2 boxes/case |



Contec, Inc.
525 Locust Grove
Spartanburg, SC 29303 USA

Tel: (864) 503-8333
Fax: (864) 503-8444
Toll Free US, Canada, PR:
1-800-289-5762

www.contecinc.com

Sales & Customer Service

North America
Tel: +1-864-699-8253
Toll Free: 1-866-855-4733

Critical Cleaning Solutions for the Digital Age

www.contecinc.com



Contec® is an
ISO 9001:2000
registered company



© 2009 Contec, Inc. All rights reserved.
SATWipes®, Quiltex®, TuffStuff™, and
QuickPick™ are registered trademarks
or trademarks of Contec, Inc.

KimWipes® is a registered trademark of
Kimberly-Clark Corp. KleanWipes® is a
registered trademark of Fiberweb plc.



CAT003
061009

The printing industry is becoming increasingly sensitive to contamination of all types. Lint, dust, and oils can cause defects in finished print jobs and can damage some of the newer printing equipment. Contec is the global leader in cleaning products for critically clean manufacturing environments such as microelectronics, pharmaceutical, and automotive paint. We are now bringing this same expertise and technology into the printing industry.

Used correctly, Contec Graphic products will help you to:


- Reduce reprints and scrap
- Properly clean and care for expensive digital and offset presses
- Use less solvent and reduce VOC emissions
- Use fewer wipes and reduce solid waste

VK Press Sponge


The VK Press Sponge is a unique sponge and low lint wipe combination providing all the advantages of both products. The interior sponge allows large amounts of solvent to be brought to the surface being wiped while the lint-free knit allows for contamination free wiping.

- Minimize wipe usage with long lasting sponge
- More efficient release and use of cleaning solvents
- Polyester fabric surface has good scrubbing ability and excellent abrasion resistance with virtually no linting
- Sponge is protected from abrasion by polyester fabric
- Excellent for use in hand cleaning all styles of plates and blankets including digital
- Available in two sizes to fit task requirements: 5" and 8.5"


| | | |
|-------------|-----------------------------------------------------------|--------------------------------|
| VKSPONGE-1 | VK Press Sponge, 8.5" x 4.25" x .6" (21.5 x 10.8 x 1.5cm) | 8 pieces/bag; 96 pieces/case |
| VKSPONGE-55 | VK Press Sponge, 5" x 5" x .6" (12.7 x 12.7 x 1.5cm) | 15 pieces/bag; 120 pieces/case |

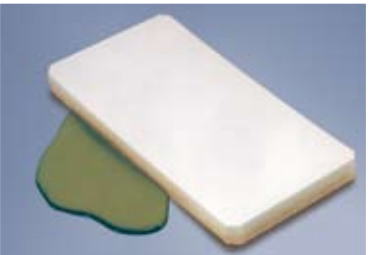

Reduce VOCs through efficient solvent utilization

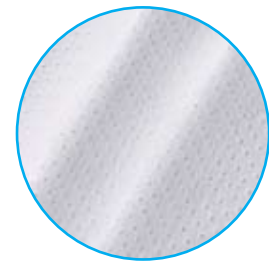

Close-up view of Quiltec® 2-ply material

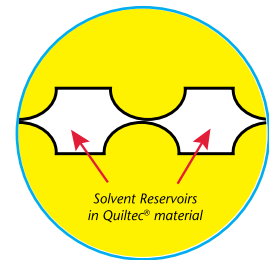

Cross-section of Quiltec® 2-ply material

Polynit Heatseal QuickPick™ & Quiltec® Web Roll Pads

Polynit Heatseal is a textured 100% polyester knitted wipe. These wipes are used extensively in semiconductor, flat-panel manufacturing, and in the manufacturing of digital printing equipment. The product has excellent features for effective cleaning with minimal contamination.

Quiltec® wipes are a two-ply knitted pad with extra sorbency and cleaning power. An excellent replacement for lint cotton web products. Knitted wipes allow less solvent to be utilized because the solvent goes to the job being done and does not stay absorbed in the fiber.

Features and Benefits:

- Reduce reject print jobs and scrap with cleaner equipment
- Excellent abrasion resistance - generates virtually no lint in digital press wiping applications
- Improve solvent utilization
- Good absorbency with all press solvents
- Laser-cut edge seals fibers at wipe's edge and allows 100% utilization of wipe
- Will not scratch or mar sensitive surfaces such as developer drums, squeegee rollers, reverse rollers and imaging cylinders
- Contec's QuickPick™ packaging allows for easy use of one wipe at a time (US Patent # 6,978,889)

Applications

- Ideal for cleaning sensitive surfaces on all digital press equipment
- Scanner drums or glass surfaces
- Touch screen control panels
- General purpose cleaning

| | | |
|-----------|----------------------------------------------------------------------|---------------------------------------------------------------|
| PNHS-99QP | Polynit Heatseal wipes, 9" x 9" (22.9 x 22.9cm), QuickPick packaging | 50 wipes/inner bag; 2 inner bags/outer bag; 8 outer bags/case |
| QT1-44B | Quiltec wipes, 4" x 4" (10.2 x 10.2cm) | 300 wipes/bag; 12 bags/case |

Other sizes are available at www.contecinc.com



SATWipes® Hand Scrubber Towels

A presaturated hand towel designed specifically for the printing industry. Designed to minimize hand cleaning time and maximize protection of hands and equipment. A waterless and solvent-free formulation combined with a towel specifically textured for efficient cleaning.

- Cleans ink, toner, grease, tar, and many other hard to remove soils. Eliminates the need for multiple trips to the washroom for hand clean up
- Easy dispensing pop-up tub fits conveniently press-side
- Textured for hand scrubbing action to remove wet and dried ink and ground in dirt
- Solvent-free citrus scent formula complies with low-VOC Consumer Product Rules
- Quick drying chemistry gets you back to work quickly
- Keeps hands properly conditioned with aloe vera, jojoba oil, glycerin, vitamin E and anti-microbial agent to protect hands and reduce the chance of dermatitis

| | | |
|-----------|--------------------------------------------------------|-------------------------------------|
| SWHST0001 | Hand Scrubber Wipes, 9" x 12" (22.9 x 30.5cm) | 90 wipes/canister; 6 canisters/case |
| SWHST0002 | Hand Scrubber Wipes, 9" x 12" (22.9 x 30.5cm), refills | 90 wipes/roll; 12 rolls/case |



SATWipes® Silicone Lubrication Wipes

Silicone lubrication is essential to a smooth running process, however used incorrectly it can cause defects in paper and printing and can also create a slipping hazard on the shop floor. Aerosol sprays are difficult to control. Presaturated silicone wipes allow you to lubricate only those surfaces that need to be treated.

- New concept in paper cutter table lubrication for friction reduction
- Eliminate cross-contamination into more sensitive areas of the process
- Nonwoven fabric carries sufficient liquid to fully coat work surfaces
- Stops squeaking, sticking, and binding of machinery
- Retards corrosion; makes cleaning easier and quicker
- No empty spray cans requiring special disposal
- Dries rapidly; leaves no greasy or oily film

| | | |
|----------|-------------------------------------------------------------------------------|---------------------------------------|
| SWSIL005 | Silicone Lubrication wipes, polypropylene/rayon, 5" x 8" (12.7 x 20cm) | 180 wipes/canister; 12 canisters/case |
| SWSIL006 | Silicone Lubrication wipes, polyester/rayon, 6" x 9" (15.3 x 22.9cm) | 30 wipes/canister; 25 canisters/case |
| SWSIL007 | Silicone Lubrication wipes, polyester/rayon, 6" x 9" (15.3 x 22.9cm), refills | 30 wipes/roll; 25 rolls/case |



Contec offers SATWipes® with various chemicals for VOC reduction and proper solvent application.

Contact your Contec Sales Representative to discuss your specific requirements.