


VertiKlean® MAX™

Disposable polyester and foam mop head

For unmatched absorbency, the new VertiKlean® MAX™ mop head features a single layer of hydrophilic polyurethane foam laminated to polyester fabric backed by a semi-rigid thermoformed plate that easily snaps onto a VertiKlean mop head frame. While its performance is similar to that of our industry-standard VertiKlean® mops, VertiKlean MAX has a slimmer profile for cleaning in tighter spaces. VertiKlean MAX also offers increased sorbency.

Designed for applying disinfectants to both horizontal and vertical surfaces, the lightweight VertiKlean MAX is also ideal for general cleaning of ceilings, walls, and floors. The pivoting mop head frame makes it easy to clean around door and window frames as well as light fixtures and heavy equipment.

Currently available in three lengths: 8.4" (21.4cm), 12.8" (32.4cm) and 15" (38cm). The smallest VertiKlean MAX is appropriate for cleaning tasks in confined spaces, such as cleaning and disinfecting fume hoods, isolators and mini environments. The VertiKlean MAX Medium and Large are ideal for cleaning and disinfecting broad surfaces in cleanrooms and controlled environments.

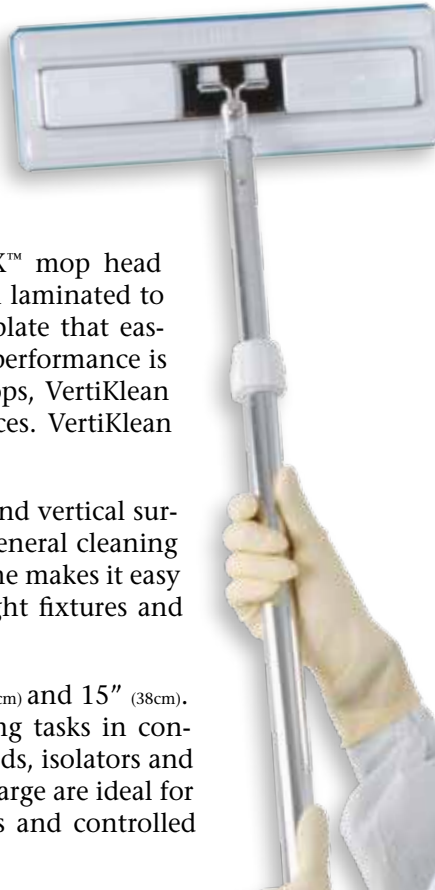

VERTIKLEAN MAX FEATURES & BENEFITS

Mop Head

Hydrophilic urethane foam and knitted polyester mop head retains liquids better than competitive products. When mop head is applied to a surface, the liquid is evenly released without dripping.

Laser cutting seals the edges of the foam and polyester, reducing the chance of fiber and particle contamination.

Excellent chemical and abrasion resistance. Lasts longer than traditional sponge mops

VertiKlean MAX enables the uniform application of disinfectants and cleaning solutions. Compatible with a wide range of solutions.

Available Gamma irradiated. Validated sterile to a Sterility Assurance Level of 10⁻⁶ per AAMI ISO11137:2006 Guidelines.

NOTE: Autoclaving of VertiKlean MAX is not recommended, due to the thermoformed plastic backplate.

Available in three sizes for a wide range of cleaning applications:

VertiKlean MAX	4.3 x 8.4 x 0.7" (11 x 21.4 x 1.9cm)
VertiKlean MAX Medium	4.3 x 12.8 x 0.7" (11 x 32.4 x 1.9cm)
VertiKlean MAX Large	4.3 x 15 x 0.7" (11 x 38 x 1.9cm)

Mop Head Frames and Handles

The disposable VertiKlean MAX mop head installs easily onto the appropriate sized VertiKlean® mop head frames and QuickConnect™ handles.

QuickConnect™ stainless steel and anodized aluminum handles are available in several lengths for a variety of cleaning tasks.

Single, double and triple bucket systems are available to fit VertiKlean MAX mops. Choose from stainless steel or autoclavable polypropylene bucket systems.

All hardware used with VertiKlean MAX is autoclavable unless otherwise noted.



VertiKlean MAX can be used with our EasyCurve bucket with Slinger. Pictured from left to right, single bucket 2726 with trolley 2728 and double bucket system 2622. Please see reverse for ordering information.



U.S. Design Patent No. D566,916
U.S. Patent No. 7,543,351

CONTEC
An ISO 9001:2008 registered company

P.O. Box 530 • Spartanburg, SC 29304 USA
+1-864-503-8333 • fax: +1-864-503-8444
Toll Free: 1-800-289-5762
www.contecinc.com • e-mail: wipers@contecinc.com

NEW FEATURE! For added flexibility, the unique design of VertiKlean MAX* allows various dry and presaturated wipes to be used with the mop head and frame. Wipes and solvent blends are available to match the critical needs of each end user.



PRESATURATED CLEANING CLOTHS	DRY CLEANING CLOTHS
<p>PROSAT® 911 Polypropylene nonwoven presaturated with 70% IPA and 30% DI water. Most economical. Ideal for flat, smooth surfaces.</p> <p>PROSAT® with spunlace nonwoven Cellulose/polyester nonwoven presaturated with 70% IPA and 30% DI water. Offers improved durability.</p> <p>PROSAT® with Polynit Heatseal Cleanroom laundered polyester knit presaturated with 70% IPA and 30% DI water. Offers improved liquid capacity and excellent durability. For uneven surfaces.</p> <p>PROSAT® with Quilttec® Cleanroom laundered two-ply quilted polyester knit presaturated with 70% IPA and 30% DI water. Allows for cleaning of larger surface area due to enhanced holding capacity and durability.</p>	<p>TuffStuff™ General-purpose polyester/cellulose nonwoven wipe. Absorbent and durable. Ideal for cleaning larger areas.</p> <p>Polynit Heatseal Cleanroom laundered, abrasion-resistant polyester knit wipe. Offers enhanced cleanliness. Ideal for uneven surfaces and heavy-duty applications.</p> <p>Quilttec® Cleanroom laundered two-ply quilted polyester knit wipe. For cleaning large surface areas; very absorbent and durable. Use where superior sorbency is required.</p>

Part #	Description	Packaging
VertiKlean MAX Mop Heads		
<i>NOTE: Autoclaving of VertiKlean MAX mop heads is not recommended.</i>		
VKMX0100	VertiKlean MAX mop head, 4.3 x 8.4 x 0.7" (11 x 21.4 x 1.9cm)	4 mops/bag; 12 bags/case
VKMX0150	VertiKlean MAX mop head, 4.3 x 8.4 x 0.7" (11 x 21.4 x 1.9cm), sterile	1 mop/bag; 48 bags/case
VKMX0200	VertiKlean MAX Medium mop head, 4.3 x 12.8 x 0.7" (11 x 32.4 x 1.9cm)	4 mops/bag; 7 bags/case
VKMX0250	VertiKlean MAX Medium mop head, 4.3 x 12.8 x 0.7" (11 x 32.4 x 1.9cm), sterile	1 mop/bag; 28 bags/case
VKMX0300	VertiKlean MAX Large mop head, 4.3 x 15 x 0.7" (11 x 38 x 1.9cm)	4 mops/bag; 6 bags/case
VKMX0350	VertiKlean MAX Large mop head, 4.3 x 15 x 0.7" (11 x 38 x 1.9cm), sterile	1 mop/bag; 24 bags/case
Mop Head Frames and Handles		
2651A	QuickConnect™ mop head frame, 7.5" (19cm) , use w/ VKMX0100/0150	1/each
2652A	QuickConnect™ mop head frame, 11.5" (29.2cm) , use w/VKMX0200/0250 and VKMX0300/0350	1/each
2642	QuickConnect handle, 16" (40.6cm) extends to 30" (76.2cm), anodized aluminum	1/each
2643	QuickConnect handle, 50" (127cm) extends to 92" (233.7cm), anodized aluminum	1/each
2671A	QuickConnect handle, extends to 16' (4.9 m), anodized aluminum, 4 piece	1/each
2644	QuickConnect handle, 16" (40.6cm) extends to 30" (76.2cm), stainless steel	1/each
2645	QuickConnect handle, 50" (127cm) extends to 92" (233.7cm), stainless steel	1/each
2725	QuickConnect handle, 60" (152.4cm), stainless steel, lightweight, 1 piece	1/each
2665	Stainless steel handle, 60" (152.4cm) w/ mop head frame, 7" (17.8cm), 1 piece, use w/ VKMX0100	1/each
2677	Stainless steel handle , 60" (152.4cm) w/ mop head frame, 12" (30.5cm), 1 piece, use w/ VKMX0200	1/each
Presaturated Disposable Cleaning Cloths * Fits mop head VKMX0100 ** Fits mop head VKMX0100 and mop head VKMX0200		
PS-911*	PROSAT polypropylene nonwoven wipes, 70% IPA/30% DI Water, 9" x 11" (22.9 x 27.9cm)	30 wipes/pouch
PSC20002*	PROSAT polyester/cellulose nonwoven wipes, 70% IPA/30% DI Water, 9" x 11" (22.9 x 27.9cm)	24 wipes/pouch
PSPS0047**	PROSAT polyester knit wipes, 70% IPA/30% DI Water, 12" x 12" (30.5 x 30.5cm)	30 wipes/pouch
PSQT0037**	PROSAT w/ two-ply polyester quilted knit wipes, 70% IPA/30 % DI Water 12" x 12" (30.5 x 30.5cm)	20 wipes/pouch
Dry Disposable Cleaning Cloths		
TSWC0917*	TuffStuff general purpose nonwoven wipes, 9" x 17" (22.9 x 43.2cm), pop up dispenser box	100 wipes/box
PNHS-1212**	Polynit heavy duty polyester knit wipes, 12" x 12" (30.5 x 30.5cm)	75 wipes/bag
LWPS0004*	Polynit heavy duty polyester knit wipes, HexaWipe, 12" (30.5cm)	75 wipes/bag
LWQT0005*	Quilttec two-ply heavy duty knit wipes, HexaWipe, 12" (30.5cm)	100 wipes/bag
Buckets, Wringers and Carts		
2726	EasyCurve bucket w/ Slinger frame, polypropylene (blue), 6.5 gal (25L)	1/each
2728	Stainless steel bucket trolley (caster base w/ 4 casters) for 2726	1/each
2622	Stainless steel cart w/ two 6.5 gal (25L) polypropylene buckets (blue, red), Slinger frame, casters	1/each
2620	Stainless steel cart w/ two 6.5 gal (25L) polypropylene buckets (blue, red), stainless steel wringer, casters	1/each
2700	Stainless steel cart w/ two 5 gal (19L) buckets, wringer, casters	1/each

NOTES:

- 1) All hardware is autoclavable unless otherwise noted.
- 2) Autoclaving VertiKlean MAX mop heads is not recommended.
- 3) Other bucket systems may be available. Ask your sales rep. for details.

*U.S. Design Patent No. D566,916
U.S. Patent No. 7,543,351



An ISO 9001:2008 registered company

P.O. Box 530 • Spartanburg, SC 29304 USA
+1-864-503-8333 • fax: +1-864-503-8444
Toll Free: 1-800-289-5762
www.contecinc.com • e-mail: wipers@contecinc.com