

# Automotive Catalog



**Contec, Inc.**

**NORTH AMERICA**

525 Locust Grove  
Spartanburg, SC 29303 USA  
Tel: +1 (864) 503-8333  
Fax: +1 (864) 503-8444  
Toll Free US, Canada, PR: 1-800-289-5762

5222 Enterprise Blvd.  
Toledo, OH 43612  
Tel: +1-419-481-4050  
Fax: +1-419-481-2540  
Toll Free US, Canada, PR: 1-800-523-2658

**EUROPE**

ZI du Prat - RP 3707  
56037 VANNES Cedex  
FRANCE  
Tel: +33(0) 2 97 43 76 98

**ASIA**

17 Longyun Road  
Suzhou Industrial park  
Suzhou 215026  
China  
Tel: +86-512-6274 4050  
Fax: +86-512-6274 4051

**Sales & Customer Service**

Toll Free: 1-866-855-4885  
E-mail: [cs\\_automotive@contecinc.com](mailto:cs_automotive@contecinc.com)  
[www.contecinc.com](http://www.contecinc.com)



**Table of Contents**

**Presaturated Solvent Wipes ..... 4-5**

**Knitted Wipes ..... 6**

**Tube Wipes..... 7**

**Microfiber Wipes ..... 8**

**Tack Cloth ..... 9**

**Dry Nonwovens ..... 10**

**Specialty Products..... 11**

In 2019, Contec is proud to partner with upstate South Carolina neighbor JD Motorsports.

As one of the most experienced teams in the NASCAR Xfinity Series (NXS), our local partnership with JD Motorsports embodies Contec’s dedication to South Carolina’s community values and culture.

For more information go to [www.contecinc.com/enjoytheride](http://www.contecinc.com/enjoytheride)



# Why Contec?

## Reasons to choose Contec for your critical cleaning needs

Contec's products bring the cleanliness of controlled environments to the automotive industry. Surface cleaning and preparation prior to painting or before applying sealants, moldings, or decals are just a few of the many tasks performed with Contec products. Our full range of wipes offers reliability and consistency for error-free surface preparation, assuring you of a high-quality, ready-to-paint surface.

### INNOVATION

As a long established leader in custom designed products for specific applications, many of our products were developed at customer requests. We take pride in developing innovative products that not only deliver outstanding performance but are cost-effective for our customers. We were the first to introduce presaturated wipes to critical environments allowing customers to greatly reduce their VOC emissions. We were also the first to develop a wall mopping system for the biotech and life sciences market. We treat new applications and customer problems as a challenge to our Research and Development capabilities.

### TECHNICAL SUPPORT

Our success would not be possible without our technical support team. Contec has the largest, most experienced sales team in the critical environment industry and a technical support team with over 100 years in critical environment solutions. Contec industry experts provide unmatched technical training and customer seminars. With sales representatives all over the world, as well as distribution centers in the United States, China and Europe, our customers benefit from personalized service and fast, efficient sample and order turn around.

### QUALITY

Both Contec manufacturing facilities are ISO 9001:2015 registered. As a vertically integrated manufacturer, Contec controls more of the manufacturing process than any of our competitors. We invite you to come visit our manufacturing facilities and find out for yourself the quality built into the products we make.

### BROAD CAPABILITY AND PRODUCT LINE

Our extensive industrial product line includes knitted wipes, woven and nonwoven wipes, presaturated wipes and mopping systems for industrial environments. In fact, we have the widest variety of presaturated wipes and wall mopping systems in the industry. Still not convinced? Contact your sales representative and ask for a product sample. Our Samples Department takes care of both standard and custom product orders. Requests come in from all over the country and most are sent to customers within 48 hours.

So "Why Contec?" Why not?



## PRESATURATED WIPES

### PROSAT® & SATWIPES® Solvent Wiping Systems

*Presaturated wipes designed for cleaning and surface preparation*

Originally developed by Contec as a safer, more efficient way to utilize solvents and wipes, PROSAT® and SATWIPES® saturated wipes are a convenient solution for many critical cleaning applications. For generations, hand-cleaning processes utilized rags or shop towels and loose solvent containers, i.e. squeeze bottles, spray bottles, pails and plunger cans. Quite often, hazardous solvents are dispensed from gallon cans or drums directly onto rags. Contec's PROSAT and SATWIPES Solvent Wiping Systems are the better alternative.

Many industries are being required by governmental regulatory agencies to reduce the amount of solvents that evaporate and are released into the atmosphere during manufacturing and assembly. Hand wiping is one of several major ways that solvent emissions are released. Presaturated wipes are an effective way to reduce solvent emissions during wiping tasks while increasing operator safety and improving the quality of the finished product.

The biggest difference between Contec's Solvent Wiping Systems and traditional hand-wiping is solvent control and wiping consistency. Wipes are evenly saturated; the same amount of solvent is released every time an operator wipes a part. Additionally, our wiping material substrates are first-quality nonwoven and knitted fabrics, not rags or shop towels.

Contec's PROSAT Wipes and SATWIPES Solvent Wiping System consist of presaturated wipes dispensed from resealable pouches or durable, reusable canisters. Custom engineered to meet your needs, a variety of fabric substrates, pouches, and canisters are available. Wipes of various sizes can be saturated with your choice of solvents and blends. Ideal for surface preparation prior to paint, sealant or adhesive bonding applications, as well as composite surface wiping, Contec's presaturated wipes are the ultimate solvent wiping tool.



### PROSAT® Presaturated Wipes

Manufactured from meltblown polypropylene, these PROSAT® presaturated wipes offer exceptional cleanliness. They are low in nonvolatile residues as well as particles and fibers. Saturated with a blend of IPA and deionized water, these wipes are an excellent choice for general surface cleaning where fast drying times are desired. The use of presaturated wipes provides maximum process control. Presaturated wipes reduce VOC emissions and solvent use up to 35% compared to spraying. PROSAT wipes are provided in convenient and easy to use peel and reseal pouches.

Features	Benefits
Presaturated with alcohol and water	Excellent choice when fast drying time is important
Low in nonvolatile residues, particles and fibers	Ideal for multiple applications
Low VOC's	Reduces VOC emissions compared to spraying

Part #	Solvent	Size	Packaging
PSL7001	85% IPA/15% DI water	16" x 17" (41 x 43 cm)	50 wipes/pouch; 15 pouches/case
PSP7003	85% IPA/15% DI water	11" x 17" (28 x 43 cm)	50 wipes/pouch; 20 pouches/case
PSP0032	90% IPA/10% DI water	11" x 17" (28 x 43cm)	50 wipes/pouch; 20 pouches/case

*PROSAT® presaturated solvent wipes reduce VOC emissions while increasing operator safety. They provide consistency and improve the quality of surface preparation applications.*





## SATWIPES® Solvent Wiping System

Contec's SATWIPES Solvent Wiping System consists of nonwoven presaturated wipes dispensed from a center-pull roll in a reusable canister. A variety of fabrics, canisters and solvents are available. All fabrics, canisters, pouches and lids have been proven to withstand contact with the harshest of solvents. To preserve product integrity, SATWIPES rolls are packaged in specially designed foil pouches, which are opened and loaded into sturdy SATWIPES canisters. Wipes can be saturated with many different solvents and blends. Various solvents are available including IPA, IPA/DI water blends, acetone, MEK, MPK, naphtha.

SATWIPES are tailored to specific tasks in your facility. This ensures that the right size wipe with the correct amount of solvent is used each time. Durable reusable canister with self-closing lid reduces waste, solvent use and VOCs.

Features	Benefits
Solvent specific color-coded labelling	Easy Solvent identification
Perforated rolls with self-closing lids	Lids close to prevent wipes from drying out
Reusable canister	Economical and solvent compatible
Various solvent blends	Meet different facility's needs

Part #	Solvent	Size	Packaging
SW420951	70/30 IPA/Di Water, 450mL	4" x 4" (10 x 10cm)	200 wipes/roll; 12 rolls/case
SW420045	Acetone, 900mL	6" x 9" (15 x 23cm)	100 wipes/roll; 18 rolls/case
SW420192	Acetone, 1300mL	9" x 11" (23 x 28cm)	75 wipes/roll; 12 rolls/case
SW420128	Acetone, 1400mL	11" x 17" (28 x 43cm)	50 wipes/roll; 12 rolls/case
SW420195	IPA, 800mL	6" x 9" (15 x 22cm)	100 wipes/roll; 18 rolls/case
SW420044	IPA, 1200mL	9" x 11" (23 x 28cm)	75 wipes/roll; 12 rolls/case
SW420066	IPA, 1500mL	11" x 17" (28 x 43cm)	50 wipes/roll; 12 rolls/case
SW420022	MEK, 800mL	6" x 9" (15 x 23cm)	100 wipes/roll; 18 rolls/case
SW420151	MEK, 1200mL	9" x 11" (23 x 28cm)	75 wipes/roll; 12 rolls/case
SW420188	MEK, 1500mL	11" x 17" (28 x 43cm)	50 wipes/roll; 12 rolls/case
SW420058	MPK, 800mL	6" x 9" (15 x 22cm)	100 wipes/roll; 18 rolls/case
SW420103	MPK, 1200mL	9" x 11" (23 x 28cm)	75 wipes/roll; 12 rolls/case
SW420194	MPK, 1400mL	11" x 17" (28 x 43cm)	50 wipes/roll; 12 rolls/case



*Low VOC Solvents  
PROSAT and SATWIPES are  
available with California  
compliant low VOC solvents.*



## Knitted Polyester Wipes

Durable, abrasion-resistant knitted polyester wipes from Contec® are laundered and packaged in our ISO Class 4 cleanroom laundry facility. These wipes are available vacuum sealed in stacks or bulk packaging. Many can be manufactured in custom sizes and shapes. Contec wipes are excellent for use on rough surfaces and for applications involving solvents, such as composite solvent wiping and when an exceptionally clean wipe is needed for critical cleaning applications.

Our knitted wipes are also available saturated with IPA and other solvents as PROSAT® Presaturated Wipes; please call your sales representative for more information.



### Quiltec® I 2-ply quilted polyester wipes

Quiltec I Wipes offer the highest sorptive capacity of any sealed edge wipe available. It is manufactured using two layers of knitted polyester fabric that are laminated together to form a stronger, more adsorbent wipe. Additional fluid is captured within the quilted pockets between the fabric layers, increasing the sorbent capacity. Quiltec I has more than twice the adsorbent capacity of a single layer wipe. Ideal for cleaning paint bells.

Part #	Description	Size	Packaging
QT1-99	Quiltec wipe	9" x 9" (23 x 23cm)	100 wipes/bag; 10 bags/case
QT1-99B	Quiltec wipe, bulk	9" x 9" (23 x 23cm)	150 wipes/bag; 6 bags/case
QT1-1212	Quiltec wipe	12" x 12" (30.5 x 30.5cm)	100 wipes/bag; 5 bags/case
QT1-1212B/100	Quiltec wipe, bulk	12" x 12" (30.5 x 30.5cm)	100 wipes/bag; 5 bags/case
BELLRINGR25	Quiltec wipe, bulk	14" x 16" (35.5 x 41cm)	25 wipes/bag; 10 bags/case

### Polynit 100% textured polyester no-run interlock knit wipe

Polynit Wipes are made of 100% knitted textured polyester with heat-sealed edges or knife cut edges for a very soft wipe. The soft edge is ideal for use on surfaces which are vulnerable to scratching. The heat-sealed edge prevents release of fibers. Polyester wipes are chemical resistant and exceptionally low in particles and fibers. An interlock knit creates a durable fabric, the addition of a periodic additional stitch of a no-run interlock knit prevents the fabric unraveling creating an even more durable fabric with strong edges.

Part #	Description	Size	Packaging
PN-99 B	Polynit wipe, bulk	9" x 9" (23 x 23cm)	300 wipes/bag; 4 bags/case
PN-1212B	Polynit wipe, bulk	12" x 12" (30.5 x 30.5cm)	150 wipes/bag; 4 bags/case
PNHS-99B	Polynit wipe, bulk	9" x 9" (23 x 23cm)	300 wipes/bag; 4 bags/case
PNHS-1212B	Polynit wipe, bulk	12" x 12" (30.5 x 30.5cm)	75 wipes/bag; 10 bags/case

### Polywipe-C Lightweight 100% polyester interlock knit wipe

Polywipe-C Wipes are made from a standardweight 100% knitted polyester that is knife cut to create a soft edge. Soft edge is ideal for use on surfaces which are vulnerable to scratching. The wipe is chemical resistant and exceptionally low in particles and extractable residue making it ideal for critical cleaning.

Part #	Description	Size	Packaging
PC-99	Polywipe-C wipe	9" x 9" (23 x 23cm)	150 wipes/bag; 12 bags/case
PC-99B	Polywipe-C wipe, bulk	9" x 9" (23 x 23cm)	300 wipes/bag; 5 bags/case
PC-99B/150	Polywipe-C wipe, bulk	9" x 9" (23 x 23cm)	150 wipes/bag; 10 bags/case
PC-1212	Polywipe-C wipe	12" x 12" (30.5 x 30.5cm)	75 wipes/bag; 10 bags/case

## CleanTube™

### 100% polyester knit tubular wipes

CleanTube Automotive Wipes from Contec® bring the cleanliness of controlled environments to the automotive industry. Constructed of 100% polyester knit and available in a variety of lengths, CleanTube Wipes are ideal for many automotive and surface preparation applications. Originally designed for removing excess sealant, the low-linting CleanTube Wipes are excellent for cleaning paint automation equipment as well.


Contec's CleanTube Wipes are available in a variety of sizes for different applications. Jersey knit is available in 7" and 9" widths. Lacoste knit is available in 7", 10" and 12" widths. Jersey and Lacoste knit CleanTube length can vary depending on specific customer needs. Lacoste knit tubes are also available in black for high color contrast in sealant finishing environments. Customers find longer lengths to be useful as robotic arm covers as well.

Features	Benefits
Constructed of durable polyester	Provides excellent sorbency
Lacoste ribbed knit	Excellent on coarse and rough sanded surfaces
Jersey Knit	Smoother texture and is highly sorbent
Heat cauterized edges	Naturally roll outward reducing the potential for particles from cut fibers
High stretch	Allows for cleaning in tight spaces


Part #	Description	Size	Packaging
LWTW0016	CleanTube, polyester lacoste ribbed knit	10" x 12" (25 x 30cm)	100 tubes/bag; 5 bags/case
LWTW0030	CleanTube, polyester lacoste ribbed knit	10" x 14.5" (25 x 37cm)	78 tubes/bag; 5 bags/case
LWTW0021	CleanTube, polyester jersey textured knit	9" x 16" (23 x 41cm)	76 tubes/bag; 5 bags/case
LWTW0031	CleanTube, polyester jersey smooth tube	9" x 24" (23 x 61cm)	53 tubes/bag; 5 bags/case
LWTW0032	CleanTube, polyester jersey smooth tube	9" x 34" (23 x 86cm)	36 tubes/bag; 5 bags/case
LWTW7J10	CleanTube, polyester jersey smooth tube	7" x 10" (17 x 25cm)	100 tubes/bag; 5 bags/case
LWTW7L10	CleanTube, polyester lacoste ribbed knit	7" x 10" (17 x 25cm)	100 tubes/bag; 5 bags/case



Made from 100% polyester knit, Contec CleanTube wipes are available in a variety of textures. Ask your sales representative for details.

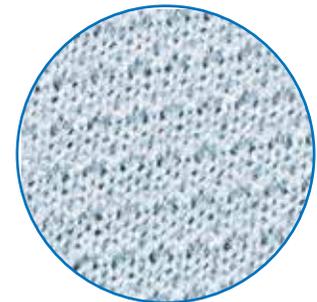

Jersey Textured CleanTube™

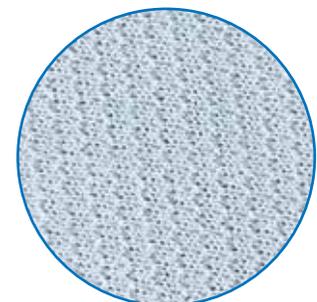

Lacoste Ribbed CleanTube™



CleanTube wipes feature heat cauterized rolled edges that reduce the potential for contamination from raw fibers.



The tubular construction of CleanTube automotive wipes allows technicians to "load" their arms with several wipes at a time, reducing downtime.





CleanTube wipes are ideal for removing excess sealant during assembly. Durable jersey knit is excellent on rough sanded surfaces.

## MICROFIBER



### Microfiber Wipes

Durable, abrasion-resistant knitted polyester wipes from Contec® are laundered and packaged in our ISO Class 4 cleanroom laundry facility. These wipes are available vacuum sealed in stacks or bulk packaged. Many can be manufactured in custom sizes and shapes. Contec wipes are excellent for use on rough surfaces and for applications involving solvents, such as composite solvent wiping. Our knitted wipes are also available saturated with IPA and other solvents as PROSAT® Presaturated Wipes; please call your sales representative for more information.

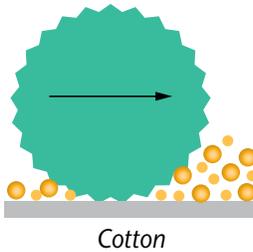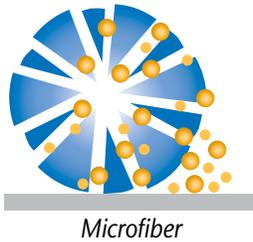

The wedge shaped filaments of microfiber easily trap particles inside the fiber, unlike cotton fibers that push dirt and dust from one point to another.

### Thunderbuff™ Silicone-free nylon/polyester microfiber wipe

Thunderbuff polishing cloths are silicone-free, terry style woven wipes made of nylon/polyester microfiber. The keys to the incredible performance of this microfiber are the size, shape, and composition of the fibers used to make the threads of the cloth. Thunderbuff Wipes effortlessly remove both oil-based and water-based residues and dirt from surfaces.

Part #	Description	Size	Packaging
LWTB0001	Thunderbuff microfiber wipes, bulk, green	16" x 16" (41 cm x 41 cm)	10 wipes/bag; 4 bags/case
LWTB0006	Thunderbuff microfiber wipes, bulk, white	12" x 12" (30.5 cm x 30.5 cm)	10 wipes/bag; 6 bags/case

### SuperBuff™ Polyester microfiber super low-lint automotive wipes

SuperBuff is a very soft, silky polyester microfiber wipe with non-abrasive thermally sealed edges to provide barrier to fibers and particles. Cleanroom laundered SuperBuff's sealed edge provides a barrier to fiber and particle generation. It can be relaundered up to 5 times. Very low particle generation makes it ideal for damp sanding residue removal and moist sand pick up.

Part #	Description	Size	Packaging
492275-970	SuperBuff wipes	21" x 20" (53 x 51cm)	5 lbs/bag; 5 bags/case
492275-975	SuperBuff wipes, bulk	12" x 18" (30.5cm x 46cm)	5 lbs/bag; 5 bags/case

### MicroSilk™ Polyester/nylon soft texture wipe for delicate surfaces

MicroSilk wipes are made of polyester and nylon. Excellent sorbency and a soft texture makes them an excellent wipe for cleaning delicate surfaces. MicroSilk is laser cut, which seals the fibers at the edges of the wipe. This results in a very clean, nonabrasive edge, which allows for 100% utilization of the wipe surface. It is extremely low in fiber and particle generation. The uniquely delicate surface and non-scratching characteristics, along with its sorbent capabilities make MicroSilk well suited for applications such as wet sand wiping, removing particles, and removing liquids and more viscous fluids.

Part #	Description	Size	Packaging
LWMS0001	MicroSilk wipes	16" x 16" (41 cm x 41 cm)	25 wipes/bag; 4 bags/case

### Anticon® Gold Sorb™ Polyester microfiber super low-lint automotive wipes

Anticon Gold Sorb is a unique wipe which combines the performance of a microfiber yarn with that of a polyester yarn to create a wipe with superior wiping and sorptive characteristics. The proprietary sealed edges of these wipes allow the use of 100% of the wipe for cleaning without the worry of harming delicate surfaces. Anticon Gold Sorb wipes have no abrasive borders, making them particularly suitable for cleaning sensitive components. These wipes are cleanroom laundered.

Part #	Description	Size	Packaging
492238-958	Anticon Gold Sorb wipes, sealed-edge polyester	12" x 12" (30.5 cm x 30.5 cm)	100 wipes/bag; 4 bags/case
492238-959	Anticon Gold Sorb wipes, sealed-edge polyester, bulk	12" x 12" (30.5 cm x 30.5 cm)	100 wipes/bag; 4 bags/case

**Polyester Tack Cloth**

**Knitted, sealed edge polyester tack cloth**

Developed with knitted selvage edges and heat-sealed cuts to reduce snags and fibers — only our tack cloth is manufactured using a high temperature and pressure tack 'thermoset' impregnation process. This process significantly reduces invisible residue buildup that may react with other finishing materials to cause coating defects such as marring and streaking. Ideal for industrial tack applications and suitable for Class A paint automotive surfaces. Custom sizes are available.

Part #	Description	Size	Packaging
BS20CS	Polyester Tack Cloth, smooth	9" x 18" (23x46cm)	100 cloths/bag; 5 bags/case
BS80CB-12	Polyester Tack Cloth, textured	9" x 12" (23x30cm)	100 cloths/bag; 4 bags/case
BS80-16	Polyester Tack Cloth, textured	9" x 16" (23x41cm)	100 cloths/bag; 4 bags/case
BS80CB	Polyester Tack Cloth, textured	9" x 18" (23x46cm)	100 cloths/bag; 4 bags/case



**Tack Cloths**

Some tack cloths contain volatile organic compounds (VOCs), water, oils, thinners and other inferior materials. Those cloths can be inconsistent in tack and may even stiffen or dry out as water, thin oils and waxes evaporate. Solvents, oils and waxes can leave invisible residues that may react with a finish causing marring, fish eyes and other coating defects. VOCs may present a regulatory burden, as well as a potential hazard to health and safety.

Tack cloths from Contec are VOC-free.

**Tax-Fre® Tack Wipe**

**Nonwoven tack wipe**

The Tax-Fre nonwoven tack wipe has been specifically engineered to provide excellent contamination removal from surfaces without sticking, grabbing, or transferring tack adhesive to the surface. A unique polymer adhesive gives the Tax-Fre wipe a soft, dry feeling, free of tackiness or stiffness.

Part #	Description	Size	Packaging
TAX-FRE	TAX-FRE Tack Wipe	10" x 18" (25 x 46cm)	100 cloths/bag; 4 bags/case



## NONWOVENS



### Nonwoven Wipes

Nonwoven fabrics are made of fibers that are not “held together” in a traditional sense, i.e. knitted or woven. They are constructed by mechanical entangling or bonding the fibers. Nonwoven fabrics can be made from polyester, cellulose, rayon, nylon, aramids and other fibers. Each fiber type has a particular strength or characteristic that makes it suitable for various environments and applications.

For example, polyester provides durability, chemical compatibility and relative cleanliness; while cellulose and rayon provide superior sorbency. Blends of these fibers can offer synergistic functions, such as fabrics that offer good durability, sorbency and liquid release. Contec offers several nonwovens fabrics for various automotive cleaning applications.

### TuffStuff™ Polyester/cellulose critical task wipes

TuffStuff Wipes are high quality critical task wipes. Available in light, medium and heavy duty, these wipes are solvent resistant and maintain their strength even when wet. TuffStuff wipes offer exceptional durability and cleanliness. TuffStuff Wipes are available in multiple sizes, weights, and packaging configurations to meet various customer needs.

The expanded range includes TuffSat, consisting of heavy-duty dry wipes, quarter folded in a tub that can be saturated with cleaning solution. This versatile option allows wipes to be customized with the correct cleaning solution for a specific environment.

Part #	Description	Size	Packaging
TSWC0917	TuffStuff™ Heavy Duty Wipes Pop-up dispenser box	9" x 16.5" (23x42cm)	100 wipes/box; 8 boxes/case
TSGA1213B	TuffStuff™ Wipes, quarter folded	12" x 13" (30x33)	50 wipes/bag; 20 bags/case
TSWC1214	TuffStuff™ Heavy Duty Wipes Roll-in dispenser box	12" x 13" (30x33cm)	500 wipes/roll; 1 roll/dispenser case
TSWC1217	TuffStuff™ Heavy Duty Wipes Double pop-up dispenser box	12" x 16.5" (30x42cm)	125 wipes/box; 2 boxes/case

### Sontara® Multipurpose Shop Towel Durable, absorbent, low-linting towel

Sontara Multipurpose Shop Towels offer strength, absorbency and versatility with exceptional performance. The wipes are lightly creped for a soft feel. They are available quarter folded, and in single or double pop-up dispenser boxes.

Part #	Description	Size	Packaging
MP1213BG	Sontara Multipurpose Shop Towels Blue, quarter folded	12" x 13" (30x33cm)	50 wipes/bag; 18 bags/case
MP1213WT	Sontara Multipurpose Shop Towels White, quarter folded	12" x 13" (30x33cm)	50 wipes/bag; 12 bags/case
MP12165BG	Sontara Multipurpose Shop Towels Blue, double pop-up box	12" x 16.5" (30x42cm)	125 wipes/box; 2 boxes/case



## SATWIPES® Hand Scrubber Towels


### Hand & general purpose cleaning wipes

SATWIPES Hand Scrubber Towels are a superior value hand cleaner/towel combination. The powerful solution does not contain any solvents which dry out your skin. Yet, it very effectively dissolves grease, grime, oil, lubricants, paints, tar, inks and more. Soils are lifted from your hands and captured in the heavy-duty towel. The solution is virtually VOC\* free making it very environmentally friendly.

SATWIPES Hand Scrubber Towels feature a dual-textured towel with green scrubber on one side for deeper, faster cleaning. Made from polypropylene material, the towels stay moist for hours allowing for multiple uses.

SATWIPES Hand Scrubber Towels are convenient and economical to use. The compact canister saves space when compared to most competitive products. Each canister has a handy, resealable dispensing top. The hand cleaner/towel combination eliminates the need for paper towels, shop rags or water. Best on grease, paints, tar, oils and lubricants, inks and more.

Part #	Description	Size	Packaging
SWHST0004	SATWIPES Meltblown Polypropylene Wipes Preloaded Canisters	9" x 12" (23x30cm)	72 wipes/roll; 6 rolls/case
SWHST0004REFILL	SATWIPES Meltblown Polypropylene Wipes Refill Rolls	9" x 12" (23x30cm)	72 wipes/roll; 12 rolls/case

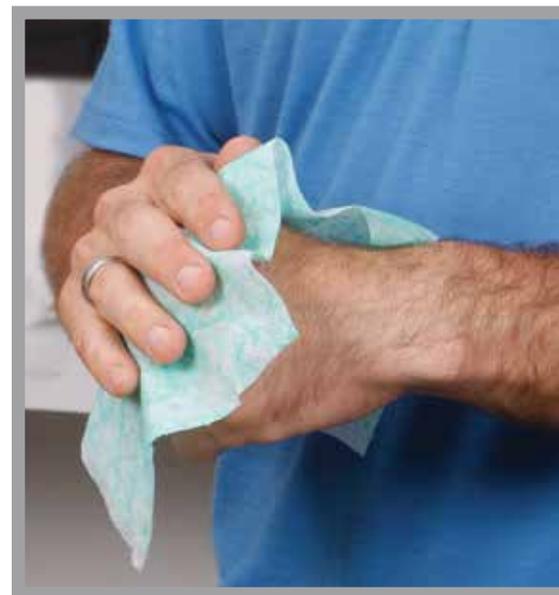

## Knitted Polyester Gloves

### Laundered gloves

Knitted Polyester Gloves are laundered in a controlled environment for automotive paint spray booth and sealer line processes. Gloves are full-fingered 100% knitted polyester and will not shrink. The construction of the silicone-free glove allows the wearer to maintain tactile sensitivity and dexterity. Features an elasticized wristband for a secure fit and gloves are color-coded by size for easy identification. Available in both 2" and 6" cuff lengths.

Part #	Description	Size	Packaging
LGAU0025	2" Cuff Yellow Band, White Glove	XSmall	12 gloves/bag; 40 bags/case
LGAU0026	2" Cuff Blue Band, White Glove	Small	12 gloves/bag; 40 bags/case
LGAU0027	2" Cuff Green Band, White Glove	Medium	12 gloves/bag; 40 bags/case
LGAU0028	2" Cuff White Band, White Glove	Large	12 gloves/bag; 40 bags/case
LGAU0199	2" Cuff Purple Band, White Glove	XXSmall	12 gloves/bag; 12 bags/case
LGAU0200	2" Cuff Yellow Band, White Glove	XSmall	12 gloves/bag; 12 bags/case
LGAU0201	2" Cuff Blue Band, White Glove	Small	12 gloves/bag; 12 bags/case
LGAU0202	2" Cuff Green Band, White Glove	Medium	12 gloves/bag; 12 bags/case
LGAU0203	2" Cuff White Band, White Glove	Large	12 gloves/bag; 12 bags/case
LGAU60100	6" Cuff Yellow Band, White Glove	XSmall	12 gloves/bag; 12 bags/case
LGAU60101	6" Cuff Blue Band, White Glove	Small	12 gloves/bag; 12 bags/case
LGAU60102	6" Cuff Green Band, White Glove	Medium	12 gloves/bag; 12 bags/case
LGAU60103	6" Cuff White Band, White Glove	Large	12 gloves/bag; 12 bags/case
LGAU0204	2" Cuff Yellow Band, Black Glove	XSmall	12 gloves/bag; 12 bags/case
LGAU0205	2" Cuff Blue Band, Black Glove	Small	12 gloves/bag; 12 bags/case
LGAU0206	2" Cuff Green Band, Black Glove	Medium	12 gloves/bag; 12 bags/case
LGAU0207	2" Cuff White Band, Black Glove	Large	12 gloves/bag; 12 bags/case
GI-100-7	2" Cuff Green Band, Black Glove	XSmall	12 gloves/bag; 40 bags/case
GI-100-8	2" Cuff Grey Band, Black Glove	Small	12 gloves/bag; 40 bags/case
GI-100-9	2" Cuff Yellow Band, Black Glove	Medium	12 gloves/bag; 40 bags/case
GI-100-10	2" Cuff Brown Band, Black Glove	Large	12 gloves/bag; 40 bags/case

Laundered

Unlaundered





Contec® cleaning and automotive preparation products are available throughout the world. Sales offices are conveniently located in North America, Europe, Asia and South America. Please visit [www.contecinc.com](http://www.contecinc.com) to locate a sales representative in your region.

### **Contec, Inc.**

#### **NORTH AMERICA**

525 Locust Grove  
Spartanburg, SC 29303 USA  
Tel: +1 (864) 503-8333  
Fax: +1 (864) 503-8444  
Toll Free US, Canada, PR: 1-800-289-5762

5222 Enterprise Blvd.  
Toledo, OH 43612  
Tel: +1-419-481-4050  
Fax: +1-419-481-2540  
Toll Free US, Canada, PR: 1-800-523-2658

#### **EUROPE**

ZI du Prat - RP 3707  
56037 VANNES Cedex  
FRANCE  
Tel: +33(0) 2 97 43 76 98

#### **ASIA**

17 Longyun Road  
Suzhou Industrial park  
Suzhou 215026  
China  
Tel: +86-512-6274 4050  
Fax: +86-512-6274 4051

#### **Sales & Customer Service**

Tel: +1-864-699-8253  
Toll Free: 1-866-855-4733  
E-mail: [surfaceprep@contecinc.com](mailto:surfaceprep@contecinc.com)  
[www.contecinc.com](http://www.contecinc.com)

*Contec is an ISO registered company.  
Please visit our web site to view our most  
current certification.*