

CleanTube™ Wipes

100% polyester knit tubular wipes

CleanTube™ wipes bring the cleanliness of controlled environment laundering to the automotive industry. Made of 100% polyester, this durable fabric provides excellent sorbency while the knit construction produces a high-stretch quality that allows for ease of cleaning in tight spaces. CleanTube wipes are available in a variety of lengths, textures, and quantities/case, making them ideal for a variety of surface preparation applications.

The unique tubular shape of the wipes allows technicians to “load” their arms with several wipes at a time to diminish downtime, and the heat-sealed edges naturally roll outward to reduce the potential for particle contamination from cut fibers. Originally designed for removing excess sealant, these low-linting wipes are also excellent for cleaning paint automation equipment.




CleanTube wipes feature heat cauterized rolled edges that reduce the potential for contamination from raw fibers.


Product Information		
Material	100% polyester	
Construction	knit	
Attribute (units)	Typical Value**	Test Method
Basis weight (oz/yd ²)	4.5	
Sorptive rate (seconds)	25	
Non-volatile residue, NVR IPA (g/m ²)	0.065	
Particles, readily releasable P ≥ 3.0µm (x10 ⁶ /m ²)	1.36	IEST-RP-CC004.2, Sec. 5.1
Fibers > 100µm (x10 ³ /m ²)	0.0325	IEST-RP-CC004.2, Sec. 5.2

**ND = None detected; levels are below detection limit of test equipment

Part No.	Description	EA/BG	BG/CS
LWTW7L10	CleanTube Wipes Tubular lacoste ribbed knit, 7" x 10" (18x25cm)	100	5
LWTW0016	CleanTube Wipes Tubular lacoste ribbed knit, 10" x 12" (25x30.5cm)	100	5
LWTW0030	CleanTube Wipes Tubular lacoste ribbed knit, 10" x 14.5" (25x37cm)	78	5
LWTW7J10	CleanTube Wipes Tubular jersey smooth knit, 7" x 10" (18x25cm)	100	5
LWTW0036	CleanTube Wipes Tubular jersey smooth knit, 9" x 10" (23x25cm)	100	5
LWTW0031	CleanTube Wipes Tubular jersey smooth knit, 9" x 24" (23x61cm)	53	5
LWTW0025	CleanTube Wipes Tubular lacoste ribbed, 4' (1.12m)	14	5

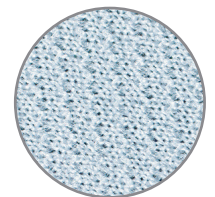

Lacoste Ribbed CleanTube™

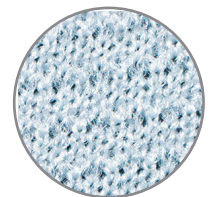

Jersey Textured CleanTube™

EA = Each; BG = Bag; CS = Case

***Notes**

- a) The data shown are typical values and should not be used as product specifications.
- b) Valid product comparisons may only be obtained through side-by-side testing in the same test facility, under similar conditions.
- c) Current and/or comparison data may be available. Please contact a Contec sales representative for details.

TDS009ISP
121420

Copyright © 2020 Contec, Inc. All rights reserved.