

VertiKlean[®] MAX[™] Hands Free Mop Removal Tool


Hands-free stainless-steel mop removal tool for Compact Bucket System

Description

2639 consists of two 304 grade electropolished stainless pieces that are made to fit on the 15L compact bucket systems. The top piece has two hooks that mount to a horizontal bar on the back of the cart handle.

The bottom piece has two clips that snap onto a bar on the base of the cart. This piece is made to hold waste disposal bags (BNBG0001 or BNBG0002). It supports the weight of the used mops and holds the waste disposal bags open.

This system will allow for hands free mop removal and disposal of all versions of Contec's VertiKlean MAX and VertiKlean MAX Sealed Edge style mops. Each waste disposal bag will hold approximately 10 VertiKlean MAX Sealed Edge and 6 VertiKlean MAX used mops.

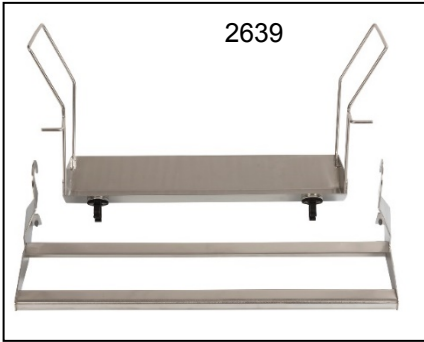

Technical Information

Part No.	Description	Material
2639	Hands-Free Mop Head Removal Tool and waste bag holder	Type 304 stainless steel
Accessories		
2693	Waste bag holder (handle) clips	Polycarbonate
BNBG0001	Disposal Bag, 26" x 18" cleanroom bag	4 mil LDPE
BNBG0002	Irradiated (25-50 kGy) Disposal Bag, 26" x 18" cleanroom bag	4 mil LDPE
Replacement Parts		
2693	Waste bag holder (handle) clips	Polycarbonate

Part Number	Description	EA/CS
2639	Hands-Free Mop Head Removal Tool and waste bag holder	1

Part Number	Description	EA/OB1	OB1/OB2	OB2/CS	EA/CS
BNBG0001	Disposal Bag, 26" x 18" cleanroom bag	1	20	4	80
BNBG0002	Irradiated (25-50 kGy) Disposal Bag, 26" x 18" cleanroom bag	1	20	4	80

Key: EA = Each, OB1 = Outer Bag 1, OB2 = Outer Bag 2, CS = Case

- Notes:
- 1) Data shown are typical values and should not be used as product specifications.
 - 2) The information presented here is applicable to the part numbers shown above, as well as to any product containing the same materials and produced under the same conditions, regardless of product size or packaging configuration. Please contact a Contec sales representative for more details.

Revision date: 02/19/19



Copyright © 2019 Contec, Inc. All rights reserved.

North America
P.O. Box 530
Spartanburg, SC 29304 USA
Phone: +1-864-503-8333
www.contecinc.com

Europe
ZI du Prat – RP 3707
56037 VANNES Cedex
FRANCE
+33 297 437 698

China
No.17 Longyun Road
Suzhou 215024
CHINA
+ 86-512-6274 4050