Compact Bucket Systems

Improved versatile multiple bucket system for use with Contec's flat and curved mops

Contec's autoclavable Compact Bucket System is an all-in-one solution to make cleaning and disinfecting easier and more efficient. The cart is designed for use with Contec® mops such as the VertiKlean® MAX™, VertiKlean® MAX™ Sealed Edge, EasyCurve® and QuickTask™ Mopping Systems.

The stainless steel cart is available in multiple configurations to meet the unique needs of your environment. It is available with either two or three autoclavable buckets and a utility cart handle. Each cart is fitted with quiet, easy to move casters that lock in place when needed. The utility handle allows two small buckets (1.6 gallon) or one large bucket (3.9 gallon) to be positioned on the handle providing additional storage for extra supplies such as clean mop heads, solution spray bottles, wipes, and other items as needed.

The cart frame has an integrated mop head removal tool on the front for easy, hands-free removal of a VertiKlean MAX or VertiKlean MAX Sealed Edge mop head. An optional hands-free removal tool is also available for both the VertiKlean MAX mop heads and the QuickTask mop heads. Two mop holders with mop brace and handle clasps on either side of the cart keep the mop in position and allow for convenient mop storage during transport and storage.

The systems are provided with stainless steel debris screens. The screen is positioned in the base of the clean and rinse buckets and prevents the mop from touching the bottom of the bucket where unwanted contaminants settle.



Features	Benefits
On cart storage for two mop handles and frames	 Allows convenient storage of two mop handles and frames keeping mops out of the way Mop holders keep mops securely in place when changing locations
Improved castors and connections	Significantly reduces noise during useMore durable attachments with less "rattle"
Compact polypropylene buckets with integral drip cap	 Keeps buckets in place while in use and prevents drips between the buckets and floor Buckets can hold a curved or flat wringer for curved or flat mops
Integral mop head removal tool or optional hands-free mop head removal tool	 Allows easy hands-free removal of the VertiKlean MAX and QuickTask mop heads Used mop heads can easily be discarded
100% autoclavable, electropolished stainless steel cart	 Safe for autoclave at 121° C for 30 minutes allowing it to be used in the most critical environments Compatible with most cleanroom disinfectants and cleaners
Utility handle basket holds 2 x 6 L buckets	Additional storage for clean mop heads, solution bottles, wipes, and other cleaning supplies if needed

PDSM043 | 021324



Part No.	Description	Size	Packaging	
2942U2B	Compact Bucket System, two 15 L polypropylene buckets, with utility handle, two 6 L buckets and one debris screen	25" x 26.5" x 41" (63 x 67 x 104 cm)	1/case	
2942U3B	Compact Bucket System, three 15 L polypropylene buckets, with utility handle, two 6 L buckets and two debris screens	32" x 26.5" x 41" (81 x 67 x 104 cm)	1/case	
2942U3S	Compact Bucket System, three 10 L polypropylene buckets, with utility handle and two debris screens	32" x 26.5" x 41" (81 x 67 x 104 cm)	1/case	
Wringers				
2689	Stainless Steel Flat Wringer for polypropylene buckets	3.9 gallon (15 L)	1/case	
2756	Stainless Steel Flat Downpress Wringer for polypropylene and stainless steel buckets	-	1/case	
2690	Stainless Steel Curved Wringer for EasyCurve mops	3.9 gallon (15 L)	1/case	
6029	Stainless Steel Flat Wringer for stainless steel buckets	2.6 gallon (10L)	1/case	
Hands Free Mor	Removal			
6033	VertiKlean MAX Hands-Free Mop Removal Tool For Compact Bucket System	-	1/case	
6034	QuickTask Mop Removal Tool for Compact Bucket System	-	1/case	
BNBG0001	Disposal bag for mop head removal tool	-	80/case	
BNBG0002	Irradiated disposal bag for mop head removal tools	-	80/case	
Accessories and Spares				
PB6BS-3	Polypropylene utility bucket	1.6 gallon (6 L)	2/case	
UBKT0008	Red, Blue, and Gray polypropylene buckets	3.9 gallon (15 L)	1 set/case	
UBKT0009	Red and Gray polypropylene buckets	3.9 gallon (15 L)	1 set/case	
2675	Stainless steel debris screen for 15 L polypropylene buckets	-	1/case	
BKTBAG2	Irradiated bucket liners 4 mil polyethylene Fits 3.9 gallon (15 L)	-	3/bag; 20 bags/case	
6026	Replacement casters	-	1/case	
6028	Stainless steel debris screen for 10 L bucket	-	1/case	

PDSM043 | 021324



Product Information			
Packaging Materials	Case (CS), corrugated fiberboard (PAP)		
Handle Clips Wringer and Removal tools Casters Finish Mop frames Buckets	Stainless steel, type 304 Stainless steel Stainless steel, type 304 (sold separately) Stainless steel frames with blue rubber autoclavable wheels Electropolished (2906 & 2652LF) Stainless steel, type 304 and (2699P) Polypropylene Polypropylene copolymer/stainless steel, type 316, deep drawn Low-density polyethylene (LDPE)		



2906



2652LF

Recycle Symbols

PET









Dimensions



2942U2B

Cart 25" x 26.5" x 41" (63 x 67 x 104 cm)

Buckets 6.7" x 20.3" x 10.2" (17 x 51.5 x 26 cm)

Utility buckets 7.1" x 9.3" x 9.3" (18 x 23.5 x 23.5 cm)



2942U3B

Cart 32" x 26.5" x 41" (81 x 67 x 104 cm)

Buckets 6.7" x 20.3" x 10.2" (17 x 51.5 x 26 cm)

Utility buckets 7.1" x 9.3" x 9.3" (18 x 23.5 x 23.5 cm)



2942U3S

Cart 32" x 26.5" x 41" (81 x 67 x 104 cm)

Buckets 6.9" x 19.1" x 7.9" (17.5 x 48.5 x 20 cm)

PDSM043 | 021324

Product Features

Quiet casters

Provide better performance on textured floors. All four casters lock, making it easier to use for cleaning and disinfecting.



Optional hands-free mop head removal tool: 6033

An optional hands-free removal tool is also available to use with the VertiKlean MAX and VertiKlean SE mop heads. This stainless steel tool is easily installed on the back of the cart and includes a frame for holding disposal bags.

The waste bag holder can be used with sterile or nonsterile waste bags for complete hands free removal and disposal of dirty mop heads.



Optional hands-free mop head removal tool: 6034

An optional hands-free removal tool is also available to use with the range of QuickTask Mop Heads. This stainless steel tool is easily installed on the back of the cart and includes a frame for holding disposal bags.

The waste bag holder can be used with sterile or nonsterile waste bags for complete hands-free removal and disposal of dirty mop heads.

In order to use this hands-free option, the QuickTask magnetic mop head fra

In order to use this hands-free option, the QuickTask magnetic mop head frames must be used, 2906 (stainless steel) and 2699P (polypropylene).



Integral mop holders


Two mop holders with handle hooks on either side of the cart allow for convenient mop storage during transport and storage.



Integral debris screens

All systems are provided with stainless steel debris screens.

The screen is positioned in the base of the clean and rinse buckets and prevents the mop from touching the bottom of the bucket where unwanted contaminants settle.

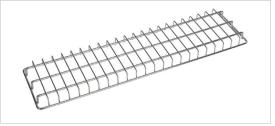

PDSM043 | 021324

