

CONSTIX® Sealed Polyester Swab

SP-9

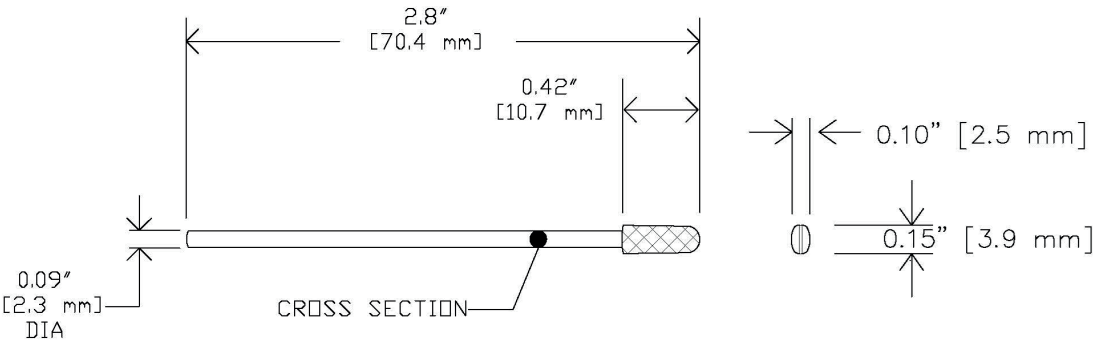
Small double layer sealed knitted polyester swab



CONSTIX® SP-9 sealed polyester swab consists of 100% knitted polyester fabric that is thermally bonded to a flex-tip polypropylene handle. The swab head is made of cleanroom laundered, double layer knitted microfiber polyester material. The polyester head is constructed without adhesives or binders, which makes the swab compatible with most common solvents, such as alcohols and ketones. The polypropylene handle has a thin, flexible tip that enables access to very small areas and components. The SP-9 swab is durable, absorbent and features extremely low particles and residue levels.



Features	Benefits
Sealed polyester head	<ul style="list-style-type: none">• Provides enhanced sorbency, particle entrapment, and removal• Compatible with most common solvents, such as alcohols and ketones
Thin, flexible tip	<ul style="list-style-type: none">• Enables access to very small areas and components

Part No.	Description	Size	Packaging
SP-9	CONSTIX Sealed Polyester Swab	Head dimension: 0.15" x 0.42" (3.9 x 10.7 mm) Handle diameter: 0.09" (2.3 mm) Total length: 2.8" (70.4 mm)	500/case



Product Information	
Head material	<ul style="list-style-type: none">Knitted polyester
Handle material	<ul style="list-style-type: none">Polypropylene
Construction	<ul style="list-style-type: none">Thermally sealed and attached
Packaging materials	<ul style="list-style-type: none">Outer bags (OB1): low density polyethylene (LDPE) Case (CS): corrugated fiberboard (PAP) 
Environment	<ul style="list-style-type: none">ISO 3-8 Grade A/B

Recycle Symbols				
PET	HDPE	LDPE	PP	PAP
				

Packaging	EA/BG	BG/CS	EA/CS
SP-9	100	5	500

EA = each; BG = bag; CS = case