

Klean Max™ Wall Washing System

Disposable polyester and microfiber mop head for cleaning and disinfecting

Designed for cleaning and applying disinfectants to both horizontal and vertical surfaces in pharmacy cleanrooms and other critical healthcare environments, the lightweight Klean Max has a slim profile and is ideal for general cleaning of ceilings, walls, and floors. The pivoting mop head frame makes it easy to clean around door and window frames, as well as light fixtures and heavy equipment.

Intended for limited use, the 100% synthetic polyester and microfiber Klean Max mop does not promote bacteria growth, reducing the risk of cross contamination, leading to better patient outcomes. The unique construction allows for even application of disinfectants and cleaning solutions. The slightly textured microfiber face provides superior particle pick-up and contamination removal.

Available in three lengths, 8.4" (21 cm), 12.8" (32.4 cm), and 15" (38 cm), the larger Klean Max is ideal for cleaning and disinfecting broad surfaces in pharmacy cleanrooms. The mop's laser cut, thermally sealed edges, and material of construction make it a low-lint option reducing the chance of fiber and particle contamination. The small and medium-sized (also available with a sealed edge) Klean Max is appropriate for tasks in smaller environments. Ergonomic, lightweight adjustable handles are available in several lengths for maximum flexibility. All hardware is autoclavable.



Ideal for use on floors, walls, and ceilings found in USP <797> and USP <800> regulated pharmacy cleanroom facilities, Contec® Klean Max™ Mop helps to ensure compliance and meet stringent cleaning and disinfecting protocols.

Features	Benefits
Hydrophilic polyurethane foam and knitted polyester mop head	<ul style="list-style-type: none"> Retains liquid better than competitive products When applied to a surface, the liquid is evenly released without dripping Does not promote bacteria growth
Laser cut, thermally sealed mop edges	<ul style="list-style-type: none"> Low-lint Non-shedding Reduction of fiber and particle contamination
Compatible with different chemistries	<ul style="list-style-type: none"> Suitable for use with a wide range of disinfectants Does not interfere with the efficacy of quat-based disinfectants Enables the uniform application of disinfectants and cleaning solutions
Available gamma irradiated and validated sterile to a 10 ⁻⁶ SAL per ANSI/AAMI/ISO 11137	<ul style="list-style-type: none"> Suitable for use in all cleanroom suites


*Klean Max is disposable and designed for limited use. If left in bleach solution over a 24-hour period, the mop head will discolor.

Part no.	Description	Size	Packaging
Mop Heads			
HCKM3001	Klean Max mop head, small	8" x 4" x 1" (20 x 10 x 2 cm)	4/bag; 12 bags/case
HCKM3051	Klean Max mop head, small, sterile	8" x 4" x 1" (20 x 10 x 2 cm)	1/bag; 48 bags/case
HCKM3002	Klean Max mop head, medium	13" x 4" x 1" (33 x 10 x 2 cm)	4/bag; 7 bags/case
HCKM3052	Klean Max mop head, medium, sterile	13" x 4" x 1" (33 x 10 x 2 cm)	1/bag; 28 bags/case
HCKM3003	Klean Max mop head, large	15" x 4" x 1" (38 x 10 x 2 cm)	4/bag; 6 bags/case
HCKM3053	Klean Max mop head, large, sterile	15" x 4" x 1" (38 x 10 x 2 cm)	1/bag; 24 bags/case
HCKM3005	Klean Max mop head, small, sealed edge	9.5" x 5" x .0375" (24 x 13 x 1 cm)	4/bag; 10 bags/case
HCKM3055	Klean Max mop head, small, sealed edge, sterile	9.5" x 5" x .0375" (24 x 13 x 1 cm)	1/bag; 40 bags/case
HCKM3004	Klean Max mop head, medium, sealed edge	15" x 5" x 0.375" (38 x 13 x 1 cm)	4/bag; 4 bags/case
HCKM3054	Klean Max mop head, medium, sealed edge, sterile	15" x 5" x 0.375" (38 x 13 x 1 cm)	1/bag; 24 bags/case
Mop Frames and Handles			
2651SS	QuickConnect Mop Frame Stainless steel mop frame for small mop heads	7.5" (19 cm)	1/case
2652LF	QuickConnect Layflat Mop Frame Stainless steel mop frame for medium & large mop heads	11.5" (29 cm)	1/case
2725E	QuickConnect Handle, Stainless steel, one piece	60" (152.4 cm)	1/case
2642	QuickConnect Telescopic Handle, Anodized aluminum	16" - 30" (40 - 76 cm)	1/case
2643	QuickConnect Telescopic Handle, Anodized aluminum	50" - 92" (127 - 234 cm)	1/case
2644	QuickConnect Telescopic Handle, Stainless steel	16" - 30" (40 - 76 cm)	1/case
2645	QuickConnect Telescopic Handle, Stainless steel	50" - 92" (127 - 234 cm)	1/case

NOTE: Due to thermoforming of the plastic backplate, autoclaving of Klean Max is not recommended. All hardware is autoclavable unless otherwise noted.



2652LF, HCKM3004, 2725E

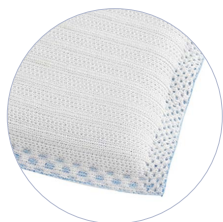

Ribbed microfiber face with sealed edge.



2652LF



2725E