



# Specialty Cleaning Products for Lab Animal Sciences

*Clean counts most*





# Contec® Specialty Cleaning Products for Lab Animal Sciences

Mopping systems, wipes, application tools, and disinfectants for every vivarium and every type of surface.

For more than 30 years, Contec has been the leading manufacturer worldwide of mission-critical cleaning products and tools in facilities where mitigating risk of contamination is of utmost importance. Contec's products are used in a variety of critical life science industries – biomedical, pharmaceutical manufacturing, cleanrooms, healthcare, acute care, medical device, optics, and others.

Combining that knowledge and experience with that of our industry-specific distribution partners, we understand the unique cleaning requirements of lab animal facilities. Contec's advantage in the market is two-fold:

1. We develop and manufacture our mops, wipes, and other tools here in the USA at our own quality-controlled facilities
2. We have the broadest array of products in the lab animal space

With labor shortages hitting everyone, Contec's products allow facilities to do more with less. Our solutions-based product line maximizes labor with better results in less time. Simply said:

Safer.

Faster.

Cleaner.

Implementation of Contec critical cleaning tools can help reduce labor and costs while improving cleanliness in the vivarium.





# Peroxigard®

## Surface cleaner and disinfectant

### Product information

Peroxigard® is an accelerated hydrogen peroxide (AHP). AHP® is a patented synergistic blend of hydrogen peroxide at low concentrations combined with surfactants, wetting agents, and chelating agents. This synergy dramatically increases hydrogen peroxide's germicidal efficacy and cleaning performance.

All ingredients in AHP are listed on the EPA inert lists and the FDA Generally Regarded as Safe List (GRAS). The benefits of AHP have been evaluated and supported by over 55 peer reviewed studies. Peroxigard has become the leading cleaner/disinfectant in the lab animal sciences space. It is compatible with most surfaces and has fast contact times with broad-spectrum efficacy.

Part No.	Description	Size	Packaging
29101-CONT	Peroxigard RTU Disinfectant Includes flip-top cap	32 oz. (0.9 L)	12/case
29105-CONT	Peroxigard RTU Disinfectant	1 gallon (3.8 L)	4/case
29109-CONT	Peroxigard RTU Disinfectant	5 gallon (19 L)	1/pail
29110-CONT	Peroxigard RTU Disinfectant	30 gallon (114 L)	1/drum
29111-CONT	Peroxigard RTU Disinfectant	55 gallon (208 L)	1/drum
VHH073	Peroxigard RTU Disinfectant Secondary container label		10/pack
HDP003	Peroxigard RTU hand pump	5 gallon (19 L)	1/each
29305-CONT	Peroxigard Concentrate Surface Cleaner & Disinfectant	1 gallon (3.8 L)	4/case
29309-CONT	Peroxigard Concentrate Surface Cleaner & Disinfectant with spout	5 gallon (19 L)	1/pail
29311-CONT	Peroxigard Concentrate Surface Cleaner & Disinfectant	55 gallon (208 L)	1/drum
VHH074	Peroxigard Concentrate Secondary container label		10/pack
29221-CONT	Peroxigard RTU Disinfectant Wipes	6" x 7" (15 x 17 cm)	12/case
AHP425	Precise® Test Strips for Peroxigard Concentrate		50/bottle
HDP001	Peroxigard Concentrate hand pump	1 gallon (3.8 L)	1/each
HDP002	Peroxigard Concentrate hand pump	55 gallon (208 L)	1/each
PRMH9005	Spray trigger sprayer for Peroxigard RTU	32 oz. (0.9 L)	12/case
PRMH9006	Foaming trigger sprayer for Peroxigard RTU	32 oz. (0.9 L)	12/case
PRMH9007	Empty bottle with flip-top cap	32 oz. (0.9 L)	12/case

# ZeroGravity™ QuickChange™ Mopping System

Create a customized mop that fits your needs

## Product information

**ZeroGravity™ QuickChange™ Mopping Systems:** Cleaning the vivarium is often time consuming and challenging. Why? Many times, it comes down to a lack of effective and efficient tools. Contec has been developing exceptional mopping systems for critical areas such as vivariums for over three decades. We offer tools that not only reduce the time it takes to clean, but make the job easier for the user.

Our innovative mopping system is called ZeroGravity because it's extremely lightweight, flexible, and puts the work on the system instead of the user. It's designed so that one handle can accommodate a variety of QuickChange™ interchangeable tools to perform multiple tasks.

The blue ZeroGravity mop frame is 100% recyclable polypropylene with an extremely low profile, making cleaning under racks, cages, and equipment easier than ever. The nonferrous aluminum handles come in a variety of lengths and are easy to interchange as needed. They are strong and durable yet light enough to reduce the strain on operators that traditional mops can cause. The ZeroGravity's innovative curved mop frame provides even distribution of pressure for maximum cleaning.



Part No.	Description	Size	Packaging
<b>Mopping Hardware</b>			
PRMH8014	ZeroGravity QuickChange Telescoping aluminum handle includes PRMH1003	56" - 100" (142 - 254 cm)	1/case
PRMH8015	ZeroGravity QuickChange Telescoping aluminum handle includes PRMH1003	38" - 68" (97 - 173 cm)	1/case
PRMH8005	ZeroGravity Mop Frame Blue	4" x 17.5" (10 x 44.5 cm)	6/case
2706H	SureFlex Flexible Mop Frame, Blue TPE with hook	15.3" x 4.5" (38.9 x 11.4 cm)	1/case
PRMH1003	ZeroGravity QuickChange Stationary z-clip connector	9.75" (25 cm)	1/case
PRMH1004	ZeroGravity QuickChange Adjustable z-clip connector	9.75" (25 cm)	1/case
PRMH1005	ZeroGravity QuickChange Claw mop connector	9.75" (25 cm)	1/case
4811	Dust Mop Frame With telescoping aluminum handle	48" frame (121.9 cm)	1/case
PRMK1001	Pemira Microfiber Mop starter kit Contains: PRMH8005, PRMH8015, bundle of PRMM0001, PRMM3001, 5-PRMW1217, roll of PRMW0069	-	1 kit/case
PRMK1012	Contec Professional Terminal Cleaning Kit Contains: bundle of PRMM0001, PRMH8005, PRMH8015, 3-PRMM3001, 5-PRMW1217, PRMH1004, PRMH2005, 3-PRMW0112	-	1 kit/case
PRMH2007	ZeroGravity QuickChange 3-in-1 Squeegee Mop Frame	15.75" (40 cm)	1/case

**Bucket and Wringer System**

2720	Polypropylene Double Bucket System Two 6.5 gallon (25 L) buckets (red, blue), wringer, and cart with casters	6.5 gal (25 L)	1/case
2738	Polypropylene sieve/wringer, blue	-	1/case
7949	Casters for UBKT0001 bucket (need 4 each per bucket)	-	1/case
UBKT0001	Polypropylene bucket, blue	6.5 gal (25 L)	1/case



## Premira® Tight Quarter Pads and Hardware

Convenient tools for hood, bio-safety cabinet and isolator cleaning

**Product information**

ZeroGravity™ handles also come in small sizes ideally suited for cleaning in confined areas like hoods, isolators and bio safety cabinets. When paired with the Tight Quarters frame and Premira® Tight Quarters pads, cleaning and disinfection is simple and easy. These specially designed pads feature the cleaning power of fresh microfiber paired with a patented liquid distribution system for excellent chemistry coverage and efficiency.

Part No.	Description	Size	Packaging
PRMM0002	Premira Disposable Microfiber Mop Pads	5" x 10.25" (13 x 26 cm)	20/bundle; 10 bundles/case
PRMH8003	ZeroGravity Aluminum Handle	20" (51 cm)	1/case
PRMH8049	ZeroGravity Tight Quarters Mop Frame, blue	4" x 9" (10 x 23 cm)	6/case
PRMP0002	Premira® Portables Saturate-on-Demand Tight Quarters microfiber mop pads	5" x 10.25" (13 x 26 cm)	20/bag; 10 bags/case



## CleanScrub Pad

Effective scrubbing that won't damage hard surfaces

**Product information**

For all those times when you need to remove stubborn debris from the floor, the CleanScrub Pad can help. CleanScrub scores (versus scrapes) in opposite directions to prevent damage to the floors/surfaces.


Part No.	Description	Size	Packaging
PRMS0405A	CleanScrub Pad	4" x 5" (10 x 13 cm)	30/case
PRMS0410A	CleanScrub Pad	4" x 10" (10 x 25.4 cm)	30/case

# High Res Mop™ featuring Premira® Microfiber

For wall and ceiling washing and cleaning

## Product information

Our High Res Mop™ featuring Premira® Microfiber incorporates a layer of hydrophilic foam to distribute larger amounts of fluid with an absorbent foam core that reduces dripping and splashing risks, helping to reduce waste and occupational exposure to contaminants and chemicals. This disposable lightweight pad helps eliminate the risks of cross-contamination. Pairing the High Res Mop pad with Contec's proprietary ZeroGravity™ mop frames and handle offers dynamic cleaning potential. It's versatile — perfect for cleaning vivarium glass, floors, walls, and ceilings. The High Res Mop is compatible with a wide variety of chemistries.

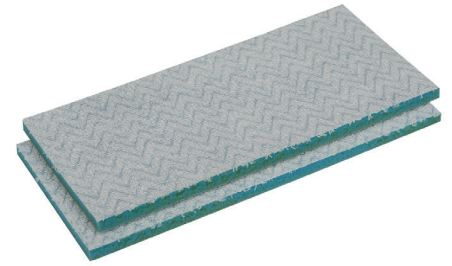

Part No.	Description	Size	Packaging
PRMM3001	High Res Mop featuring Premira Microfiber	5" x 19" (13 x 48 cm)	36/case

# Edgeless® Floor Mop

Polyester string mop

## Product information

The textured Edgeless® knitted polyester tube mop eliminates contamination from breakage and deterioration of traditional string mops. It can be used with aqueous solutions containing cleaning agents and/or disinfectants. The Edgeless Mop's textured polyester eliminates cotton and other cellulose fibers. It's an ideal solution for larger areas, long hallways, common rooms, and areas where more coverage is important to save time and labor. The Edgeless Mop can be re-laundered up to two times for additional savings.



Part No.	Description	Size	Packaging
PRMM4005	Edgeless Mop Polyester tube mop, white	11 oz. (312 g)	25/case
EL-MOPT-GY	Long Textured Edgeless Mop Gray	16 oz. (454 g)	10/case

## Premira® Microfiber Mop Pads

Disposable microfiber mop pads for maximum cleaning and uniform chemical application



### Product information

Premira® Microfiber single-use pads produce a superior clean every time, providing excellent capture and removal of both visible and invisible soil and debris. When compared to reusable textiles like cotton or laundered microfiber mops, Premira performs better at removing animal hair, bedding elements, and other sources of possible contamination. These single-use pads help reduce cross-contamination risks. Premira microfiber pads are bleach-safe, 100% synthetic, and will not neutralize quat or peroxide-based disinfectants. They also provide simplified logistics and minimal storage footprint.

Part No.	Description	Size	Packaging
PRMM0001	Premira Disposable Microfiber Mop Pads	5" x 19" (13x 48 cm)	240/case
PRMM0002	Premira Disposable Microfiber Mop Pads	5" x 11.25" (13 x 28.6 cm)	200/case
PRMM0003	Premira Disposable Microfiber Mop Pads	5" x 51" (13 x 129.5 cm)	40/case
PRMP0001	Premira® Portables™	5" x 19" (13 x 48 cm)	10/bag; 28 bags/case



## Premira® Microfiber Wipes

Quickly removes dust, debris, fluids, and oils

### Product information

When it comes to picking up small particulate like bedding, microfiber is the material of choice, and Premira® Microfiber Wipes offer superior cleaning. The large size and quarter-folded format allow for flexibility of use. They are compatible with a wide variety of chemistries and when used dry, the oleophilic properties of Premira Microfiber Wipes are excellent at removing fingerprints, oily residues, etc.

Part No.	Description	Size	Packaging
PRMW3001	Premira Microfiber Wipes Quarter folded	12" x 13" (30.5 x 33 cm)	600/case
PRCN0005	Replacement bucket For quarter folded wipes	1 gal. (3.8 L)	6/case



# Unifore™ Surface Wipes

## Polypropylene single-use wipes

### Product information

Unifore™ Surface Wipes are an excellent, economical choice for efficient distribution of chemistry. The perforated rolls and quarter folded options provide speed and convenience for critical tasks.



Part No.	Description	Size	Packaging
PRMW4008	Unifore Surface Wipes Half fold, perfed roll	10" x 12" (25.4 x 30.5 cm)	40/roll; 8 rolls/case
PRMW4048	Unifore Surface Wipes Half fold, perfed roll	10" x 12" (25.4 x 30.5 cm)	40/roll; 48 rolls/case
PRMW6030	Unifore Surface Wipes Half fold, perfed roll	10" x 12" (25.4 x 30.5 cm)	60/roll; 30 rolls/case
PRMW1480	Unifore Surface Wipes, Quarter folded with refillable bucket	12" x 13" (30.5 x 33 cm)	1,120/case
PRMW1680	Unifore Surface Wipes Quarter folded	12" x 13" (30.5 x 33 cm)	1,280/case
PRCN0005	Replacement bucket For quarter folded wipes	1 gal. (3.8 L)	6/case
PRCN0011	Replacement canister For perfed rolls	76 oz. (2.3 L)	6/case

# TuffStuff™ Wipes

## Polyester/cellulose critical task wipes

### Product information

TuffStuff™ are ideal for tough cleaning and maintenance tasks. These wipes offer an excellent combination of sorbency and durability. They are very strong wet or dry and are ideal for heavy-duty cleaning with solvents or cleaners. Longer lasting than paper towel products, TuffStuff provides continual value.



Part No.	Description	Size	Packaging
TSWC0917	TuffStuff cellulose/polyester, critical task wipes Creped white nonwoven, pop-up dispenser box	9" x 16.5" (23 x 42 cm)	100/box; 8 boxes/case
C1C1217Q	TuffStuff cellulose/polyester, critical task wipes Creped white nonwoven, quarter folded	12" x 17" (30 x 43 cm)	500/bag; 2 bags/case



## ContecClean™ Cloths

### Economical disposable wipes in convenient sizes

#### Product information

ContecClean™ Cloths offer a great balance of performance and durability. Available in a large selection of options, and ideal for application of a wide variety of chemistries with excellent coverage.

Part No.	Description	Size	Packaging
PRMW0069	ContecClean Cloths, Perfed roll and canister	6" x 9" (15 x 23 cm) + 76 oz. (2.3 L) canister	60/roll; 22 rolls/case
PRMW9069	ContecClean Cloths Perfed roll	6" x 9" (15 x 23 cm)	90/roll; 20 rolls/case
PRWM0075	ContecClean Cloths Half fold, perfed roll	10.5" x 12" (26 x 30.5 cm)	75/roll; 12 rolls/case
PRMW1213	ContecClean Cloths Quarter folded, stacked	12" x 13" (30.5 x 33 cm)	500/case
PRMW1217	ContecClean Cloths Quarter folded, stacked	12" x 17" (30.5 x 43 cm)	150/box
PRCN0001	Replacement canister For perfed rolls	76 oz. (2.3 L)	6/case
PRCN0005	Replacement bucket For quarter folded wipes	1 gal. (3.8 L)	6/case
PRCN0007	White dispenser bucket with closable lid and handle, polypropylene for PRMW0075	1 gal. (3.8 L)	6/case



## TrapMore™ Disposable Dusting Sheets

### Disposable pads for maximum cleaning

#### Product information

TrapMore™ Disposable Dusting Sheets are for anyone who wants to quickly collect, trap, and remove dirt, dust, and other small debris from surfaces. It provides a long-lasting, more hygienic, and convenient method for dusting a variety of surfaces. It can be used with nearly any dusting tool, such as a mop or high duster. It works well with the ZeroGravity™ suite of cleaning hardware. TrapMore Disposable Dusting Sheets offer better dust pick up in convenient perforated sheets for customizable lengths.

Part No.	Description	Size	Packaging
PRMM9001	TrapMore Disposable Dusting Sheets	5" x 6" 13 x 15.2 cm)	250 sheets/roll; 2 rolls/box
PRMM9002	TrapMore Disposable Dusting Sheets	8" x 6" (20 x 15.2 cm)	250 sheets/roll; 1 roll/box


# QuickChange™ High Dusters and Premira® Microfiber Covers

## Disposable covers for high cleaning applications

### Product information

Premira® Microfiber High Duster Covers offer single-use advantages for overhead cleaning applications. The High Duster XF and Standard High Duster from Contec makes cleaning hard-to-reach spaces easier when paired with our Premira® Microfiber High Duster Covers. The covers are available in two sizes to fit the High Duster XF and the Standard High Duster. The flexible body of our High Duster tools bend to hug surface contours and reduces operator strain. The High Duster XF features a foam-free design to limit potential harborage areas for hidden pathogens, making cleaning and maintenance simple.

Our High Dusters can be used as handheld tools to clean areas within arm's reach. For overhead surfaces, pair the High Duster with your choice of ZeroGravity™ QuickChange™ handles. It's ideal for cleaning air hoses connected to the rodent rack system, high ceiling vents, between walls and heavy equipment, and in other difficult to reach areas.

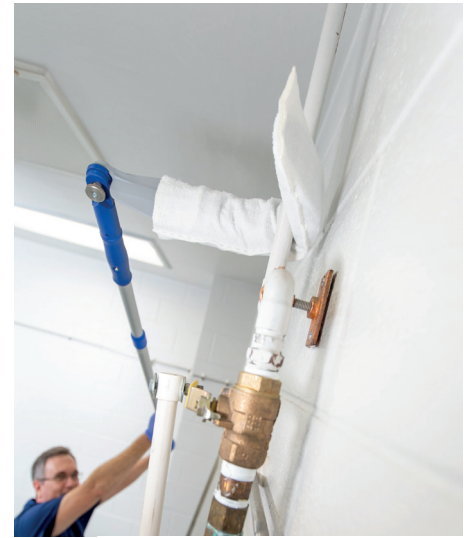

Part No.	Description	Size	Packaging
<b>High Dusters</b>			
PRMH1001	Standard High Duster, ZeroGravity QuickChange compatible	29.5" (75 cm)	1/case
PRMH2005	High Duster XF, ZeroGravity QuickChange compatible	24.25" (62 cm)	1/case
<b>High Duster Covers</b>			
PRMW0001	Premira Microfiber Standard High Duster Covers	3.5" x 20" (7.6 x 51 cm)	100/case
PRMW0112	Premira Microfiber High Duster XF Covers	14.75" x 4" (37.4 x 10 cm)	200/case

# Multi-Purpose Wipes

## 100% biodegradable cotton and viscose

### Product information

Made of 100% biodegradable cotton and viscose, our multi-purpose general cleaning wipes are the "go to" solution for rapid spill pick up, as well as cleaning stainless steel, glass, and more, while offering a more sustainable and environmentally friendly wipe.



Part No.	Description	Size	Packaging
PRMW4500	Contec Professional cotton/viscose multi-purpose cleaning wipes, quarter folded	12" x 13" (30.5 x 33 cm)	500/case
PRCN0005	Replacement bucket for quarter folded wipes	1 gal. (3.8 L)	6/case



## Trashformer™ Tool Caddy, Apron, and Pocket

Transform your trash can into a mobile workstation

### Product information

Contec® Trashformers™ are designed to improve cleanliness and efficiency. The right Trashformer selection for your facility makes it easy to bring best-in-class disposable mop pads and hardware anywhere that clean counts most.

The Tool Caddy component can hold up to three handles or tools of various sizes including mops, high dusters, brooms, dust pans, squeegees, and more. The Toolflex® holders are replaceable, and the durable wire frame of the Tool Caddy doesn't interfere with changing out the can liner.

The Apron and Pocket are both constructed of durable, chemical resistant material. The Apron offers a variety of pockets, including one sized for a wipes canister and one for Premira® mop pads. The stand-alone Pocket holds up to 20 Premira mop pads. It straps on and off easily to use anywhere, such as on can or cart handle — or even a belt loop!

Part No.	Description	Size	Packaging
PRMH5001	Trashformer Pocket for Premira Mop Pads Fits 20 mop pads/1 bundle	-	1/case
PRMH5002	Trashformer Apron 3 medium, 3 small, 2 large, 1 small wide, 1 long narrow, 1 mop pocket	-	1/case
PRMH5003	Trashformer Tool Caddy, with 3 Toolflex® holders	Fits 32, 40, 44 gal trash cans	1/case

## SorbMore™ Absorbent Pad

Fast and easy way to absorb spills



### Product information

For quick and simple spill management, the SorbMore pad absorbs up to 24 ounces of water in as little as 45 seconds. Leave it on the spill for longer, and one SorbMore pad can absorb up to 40 ounces.

SorbMore is compatible with ZeroGravity™ hardware to facilitate absorption as well as hands-free removal of the mop pad from the floor and into the trash.

Part No.	Description	Size	Packaging
SORB0001	SorbMore™ Absorbent Pad	7" x 20" (18 x 51 cm)	20/bundle; 6 bundles/case

# Toolflex One™

## Versatile, hygienic, color-coded cleaning tool holder

### Product information

Toolflex One™ is a versatile, wall mounted tool holder system to effectively organize, efficiently store and quickly access a wide variety of tools of different sizes, shapes, and contours, including sweeps, brooms, squeegees, deck brushes, mops, and other accessories. Toolflex One is the only known NSF Certified cleaning tool holder in the market.

The system can be cleaned in-place or removed for cleaning in a cage wash. Holders are easy to mount and can be quickly removed or adjusted to optimize storage in tight spaces (no tools required). Toolflex One is compatible with the ZeroGravity™ Mopping System and has a variety of special holders for canisters, glove boxes, hoses and other attachments.



Part No.	Description	Size	Packaging
5-3-5	Toolflex One aluminum rail with 3 one-size fits-all holders, blue* (mounting hardware included)	21.5" (54.6 cm)	1/case
9-5-5	Toolflex One aluminum rail with 5 one-size fits-all holders, blue* (mounting hardware included)	37" (93.9 cm)	1/case
P01H-5	Toolflex One 3-pack hooks, blue (Toolflex One rail sold separately)	21.5" (54.6 cm) or 37" (93.9 cm)	3/pack
TF2-5	Toolflex One 2-pack one-size fits all, blue (Toolflex One rail sold separately), replaces TF1-5	21.5" (54.6 cm) or 37" (93.9 cm)	2/pack
3311-1	Toolflex One Glove Box Holder, black (Toolflex One rail sold separately)	21.5" (54.6 cm) or 37" (93.9 cm)	1/case
3331-1	Toolflex One Canister Holder, black (Toolflex One rail sold separately)	21.5" (54.6 cm) or 37" (93.9 cm)	1/case
3181-1	Toolflex One Hose Holder, black (Toolflex One rail sold separately)	21.5" (54.6 cm) or 37" (93.9 cm)	1/case
3161-1	Toolflex One Universal Holder, black (Toolflex One rail sold separately)	21.5" (54.6 cm) or 37" (93.9 cm)	1/case

\*Other colors available via special order.



# Foamit

**Dramatically improves process and reduces FTE hours**

## Product information

**Foamit** provides logistical solutions for everyday cleaning and disinfecting practices. It dramatically improves process and reduces FTE hours. Saves money! Foamit can be used as a mobile or wall-mounted unit for primate, large animal and cage wash areas where water access is not available. More compact units can deliver cost savings and an easy-to-use process for every task such as spraying/foaming floors, cages walls, equipment and even floor drains. These units are task oriented and can be modified to suit your every need, making the Foamit systems used in conjunction with Contec mopping systems and wipes the perfect solution to your process needs!

Part No.	Description	Packaging
FI-10N-B-SSBV	Portable Foam Unit - Battery Operated, 10-gallon, Natural-Santo-SS Ball Valve Wand (FI-10N-B-SSBV)	1/case
FI-20N-B-SSBV	Portable Foam Unit - Battery Operated, 20-gallon, Natural-Santo-SS Ball Valve Wand (FI-20N-B-SSBV)	1/case
FI-BP-15N	Portable Foam Unit- Battery Operated, 15 gallon, Natural-Santo- Includes MIX7	1/each
DFA	Drain Foam Attachment - 48" stem - 3.5 to 5 in. Rubber Stopper - 12 in. SS Disc, Quick-Connects (DFA)	1/case
DFA-TR7	Drain Foam Attachment for Trench Drains-7" DIA Disk Brush	1/case
DFA-7	Drain Foam 7" SS Disc Assembly	1/case
NF-GRIFF-WM	Nilfisk Foam - Rinse-Spray Unit. Mobile unit with built in power. Plug in. Electric. Water powered. Wall mounted.	1/case
NF-GRIFF-CRT	Nilfisk Foam - Rinse-Spray Unit. Mobile cart unit with built in power. Plug in. Water powered.	1/case
CMS12x12	Slide Out Stand for Containers. Keeps Chemical containers off the floor.	1/case
CSTAND5x9	Wipe Stand. Holds Containers of wipes. Sits on the floor. Storage for extra container. Stainless Steel construction	1/case
FI-JR	Portable Compressor Foam Unit for pre-mix, SANTO, 120VAC, 1.5 hp air compressor, 65-degree fan tip, 25 ft. coiled twin-line hose	1/case
FI-TL	Wall-Mounted Foam Unit - Santo-Twin Line - with a 25 ft. hose as standard (requires compressor F1HP516721)	1/case
SSHH-F	Hose Hanger, Stainless-Steel, wall-mounted hardware included (SSHH-F) - for use with FWMF516L25	1/case
ACLA5721	Twin Stack Air Compressor, 1 HP, 2-gallon (ACLA5721) - for use with Wall-Mounted Unit FWMF516L25	1/case
J5LIBLS	5-gallon Carboy Contec brand with locking cap	1/case
J2.5LIYLS	2.5-gallon Carboy Contec brand with locking cap	1/case
LI-2X1	Lockable Rack unit. Wall mount. Stainless Steel. Holds two-gallon containers.	1/each
TANK20-PT	20 Gallon PET Tank Vault 80 (16" x 17" x 47") with Lid	1/each
CSTM-ETP120-TSS	Electric Transfer Pump, 120 VAC single shot timer	1/each
CSTM-ETP120-TSS-PSG	Electric Transfer Unit, 120 VAC single shot timer, PSG Gun Operation	1/each
CSTM-CART5-NOMMO	Cart 5 with NOMMO mounted foam/rinse/sanitize unit	1/each
NF-NOMMO	Nilfisk NOMMO foam/rinse/sanitize unit	1/each
SP1.5 L	Pump Spray bottle, white, 1.5 L (0.4 gal.)	1/each

# Quality Assurance Kit

## Enhance your QA program

### Product information

Visual inspection and ATP after cleaning are the most common methods to determine if an automated cage washer is working properly. Enhance your Quality Assurance program with broader testing, redundancy, and improved data logging.

Contec's Quality Assurance Kit contains everything needed to provide immediate, reliable, and effective results of the cage wash process such as rinse ability, washing cycles effectiveness, appropriate temperature within the cage washer, water hardness, and any level of protein residue left on the equipment after washing. The Log Sheet which is included with each kit enables charting routine results to monitor long-term outcomes. The Log Sheet can also be a useful tool for training.



Part No.	Description	Packaging
CNTC-001	Contec QA kit includes: (4 CW-101, 2 AT101, 1 Tosi WT101, 1 PT-313, 1 Log sheet )	10/case
CW-101	Cage wash Tempachek™ temperature check strips.	10/sheet; 1/each
AT101	Cage wash Aquatest™ water test strips	1/each
WT101	Cage wash Proformance™ washer test (TOSI)	1/each
PT-313	Cage wash Prochek-II™ protein detection test	1/each
LOG SHEET	Log sheet	1/each

For more information or to purchase  
Contec® Professional products,  
please contact our sales team.

Contec, Inc.  
Spartanburg, SC 29303 USA  
tel: +1-864-503-8333  
info@contecinc.com  
las.contecinc.com

Customer Service  
tel: 1-888-699-9304  
cs\_proclean@contecinc.com

