CONSTIX[®] Cotton Swab SC-3


Small double-ended round cotton swab

CONSTIX[®] SC-3 double-ended round cotton swabs consist of highquality, long staple-length cotton, tightly wrapped and shaped on both ends of high strength, wound paper handles. The heads are held to the handles using a methyl-cellulose binder. These swabs are Sanyo Huby brand swabs imported by Contec[®].

The high-quality cotton fibers provide excellent particle entrapment and retention, as well as exceptional sorbency of most solvents and solutions. The heads are very tightly wrapped and shaped using a methyl-cellulose binder which minimizes fiber shedding. The SC series cotton swabs are absorbent to most common solvents including isopropyl alcohol, acetone, and aqueous solutions.

Features	Benefits
Absorbent cotton fibers	Ideal for use with aqueous based solutions
Tightly wrapped head	Helps maintain low levels of extractable residue

Part No.	Description	Size	Packaging
SC-3	CONSTIX Cotton swab	Head dimension: 0.10" x 0.53" (2.6 x 13.5 mm) Handle diameter: 0.06" (1.5 mm)	5,000/case
		Total length: 3.0" (75.5 mm)	

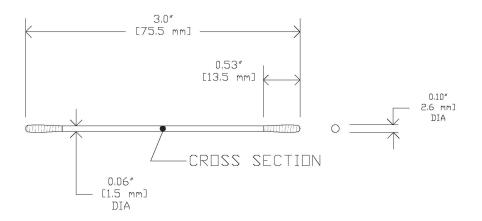

PDSS003 | 092122

Copyright © 2022 Contec, Inc. All rights reserved.

Contact us: info@contecinc.com contecinc.com Contec, Inc. Spartanburg, SC 29303 USA tel: +1-864-503-8333



Product Information		
Head material	• Cotton	
Handle material	Wound paper	
Construction	Methyl-cellulose binder	
Packaging materials	 Outer bags (OB1): low density polyethylene (LDPE) Case (CS): corrugated fiberboard (PAP) 	

Recycle Symbols

PET	HDPE	LDPE	PP	PAP
E		4		205

Packaging	EA/OB1	OB1/BX	BX/CS	EA/CS	
SC-3	25	100	2	5,000	
FA = archi OB = autor have DV = have CS = arcs					

EA = each; OB = outer bag; BX = box; CS = case

PDSS003 | 092122

Copyright © 2022 Contec, Inc. All rights reserved.

Contact us: info@contecinc.com contecinc.com Contec, Inc. Spartanburg, SC 29303 USA tel: +1-864-503-8333

