

# CONSTIX® Sealed Polyester Swab SP-1

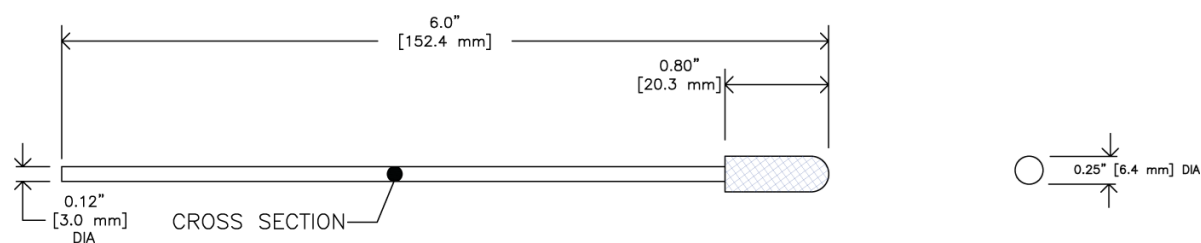
## Sealed knitted polyester swab



The CONSTIX SP-1 is a sealed polyester swab consisting of 100% knitted polyester fabric thermally bonded to a polypropylene handle. The SP-1 contains no adhesives or binders. The swab tip is made from cleanroom laundered polyester fabric. These swabs are the best option to use with harsh solvents such as acetone, trichloroethane, and nitric and sulfuric acids. SP-1 swabs are durable, absorbent, and extremely low in low particulate and residue levels.



Features	Benefits
Sealed polyester head	<ul style="list-style-type: none"> <li>Provides the lowest contamination risk of any other type of swabs</li> </ul>
Polypropylene handle	<ul style="list-style-type: none"> <li>Provides excellent resistance to most common solvents, acids, and bases</li> </ul>

Part No.	Description	Size	Packaging
SP-1	CONSTIX Sealed polyester swab	Head dimension: 0.25" x 0.80" (6.4 x 20.3 mm) Handle diameter: 0.12" (3.0 mm) Total length: 6.0" (152.4 mm)	500/case



Product Information	
Head material	<ul style="list-style-type: none"> <li>• 100% knitted polyester</li> </ul>
Handle material	<ul style="list-style-type: none"> <li>• 100% virgin polypropylene</li> </ul>
Construction	<ul style="list-style-type: none"> <li>• Ultrasonically sealed</li> </ul>
Packaging materials	<ul style="list-style-type: none"> <li>• Outer bags (OB1, OB2): low density polyethylene (LDPE) </li> <li>• Case (CS): corrugated fiberboard (PAP) </li> </ul>

Recycle Symbols



Packaging	EA/OB1	OB1/OB2	OB2/CS	EA/CS
SP-1	100	5	1	500

EA = each; OB = outer bag; CS = case