

CONSTIX® Sealed Polyester Swab SP-8M

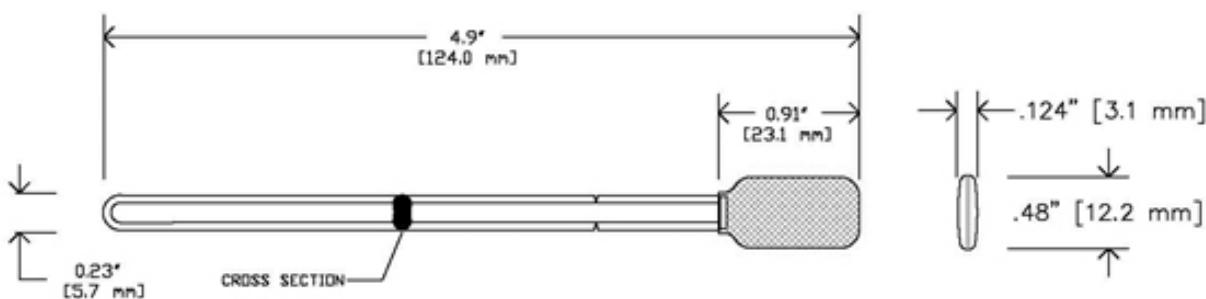
Double layer sealed knitted microfiber polyester swab



CONSTIX® SP-8M sealed polyester swab consists of 100% knitted microfiber polyester fabric that is thermally bonded to a polypropylene handle with a large paddle tip. The swab head is made of cleanroom laundered, double layer knitted microfiber polyester material. The polyester head is constructed without adhesives or binders, which makes the swab compatible with most common solvents, such as alcohols and ketones. The SP-8M swab is durable, absorbent and features extremely low particles and residue levels.



Features	Benefits
Microfiber polyester fabric	<ul style="list-style-type: none"> • Provides enhanced sorbency, particle entrapment, and removal • Compatible with most common solvents, such as alcohols and ketones
Large paddle swab head	<ul style="list-style-type: none"> • Provides broader surface coverage in critical applications

Part No.	Description	Size	Packaging
SP-8M	CONSTIX Sealed polyester swab	Head dimension: 0.48" x 0.91" (12.2 x 23.1 mm) Handle diameter: 0.23" (5.7 mm) Total length: 4.9" (124.0 mm)	100/case



Product Information	
Head material	<ul style="list-style-type: none"> Knitted microfiber polyester
Handle material	<ul style="list-style-type: none"> Polypropylene
Construction	<ul style="list-style-type: none"> Thermally sealed and attached
Packaging materials	<ul style="list-style-type: none"> Outer bags (BG): low density polyethylene (LDPE)  Case (CS): corrugated fiberboard (PAP) 

Recycle Symbols



Packaging	EA/BG	BG/CS	EA/CS
SP-8M	50	2	100

EA = each; BG = bag; CS = case