

EasySat Bucketless Floor Mop

Bucketless Mop System

Contec’s EasySat Bucketless Floor Mop is an effective and quick solution to your cleaning challenges. Designed for the cleanroom, this innovative mop is easy to use, the built-in 1.5L solution tank completely eliminates the need for a bucket and wringer.

Two options are available, the standard system is supplied with disposable mop heads made from ultra-clean polyester and foam, the VertiKlean MAX material and attaches to the hardware in seconds using a traditional hook and loop fastener.

These angled mop heads clean hard-to-reach areas and are available in two styles: smooth surface for standard floor cleaning, and textured surface for more abrasive action. The mop heads are available gamma irradiated and validated sterile to a 10⁻⁶ SAL per ANSI/AAMI/ISO 11137.

Alternatively, the EasySat Bucketless Floor Mop with the QuickConnect Frame Adaptor allows the system to be used with any Contec QuickConnect mop head frames such as VKMAX and QuickTask mop head frames. This option allows the product to be used in higher grade areas.




Features	Benefits
Hydrophilic polyester/clean ester, laser-cut sealed edge foam material	<ul style="list-style-type: none"> • Very absorbent and drip-free • Compatible with most common solutions, solvents and disinfectants • Two mop head options -- textured surface for more abrasive cleaning and flat surface for more standard cleaning
Translucent tank	<ul style="list-style-type: none"> • Translucent tank keeps solution level visible • Holds up to 1.5 L • One full tank cleans up to 465 m² • Large opening makes tank easy to fill
Fully autoclavable	<ul style="list-style-type: none"> • Entire mop system is fully autoclavable to 121°C for 30 minutes
Easy to use	<ul style="list-style-type: none"> • Trigger mechanism flow control releases cleaning solution on demand or continuously • 16 jets ensure that cleaning solution is evenly dispensed across the entire mop head
QuickConnect™ Adaptor	<ul style="list-style-type: none"> • Allows EasySat Bucketless mop to be used with EasyCurve, VertiKlean MAX and QuickTask mop heads

For more information or to request a sample, email infoeu@contecinc.com or phone + 33 (0) 2 97 43 76 98.


Copyright© 2023 Contec, Inc. All rights reserved. INT001 040723

Part No.	Description	Size	Packaging
BLMOP	EasySat Bucketless Floor Mop	55 x 10 x 146cm	Each
BLMOPQC	EasySat Bucketless Floor Mop with QuickConnect Adaptor (Allows use with any Contec QuickConnect Mop Head Frame)	55 x 10 x 146cm	Each
BLVKMOP	EasySat Mop Head Knitted polyester/foam mop	55 x 46 x 12cm	4 per bag 8 bags per case
TBLVKMOP	EasySat Textured Mop Head Textured knitted polyester/foam mop	55 x 46 x 12cm	4 per bag 8 bags per case
BLVKMOPIR	EasySat Sterile Mop Head Knitted polyester/foam mop	55 x 46 x 12cm	1 per bag 28 bags per case
TBLVKMOPIR	EasySat Sterile Textured Mop Head Textured knitted polyester/foam mop	55 x 46 x 12cm	1 per bag 28 bags per case

Product Information	
Mop material	<ul style="list-style-type: none"> Knitted polyester/ester foam/polyester loop fabric
Mop construction	<ul style="list-style-type: none"> Fabric laminated to foam
Packaging materials	<ul style="list-style-type: none"> Outer bags (OB1, OB2, OB3), low density polyethylene (LDPE)  Case (CS), corrugated fiberboard (PAP) 
Environment	<ul style="list-style-type: none"> ISO 5-8 Grade A/B for sterile, C/D for nonsterile
Shelf life	<ul style="list-style-type: none"> Sterile: 2 years from manufacturing date
Height	<ul style="list-style-type: none"> 146 cm
Weight	<ul style="list-style-type: none"> 1.7 kg 3.2 kg
Empty	
Full	
Tank capacity	<ul style="list-style-type: none"> 1.5 L

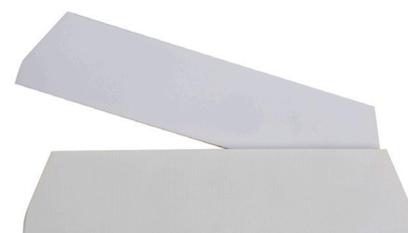

BLVKMOP

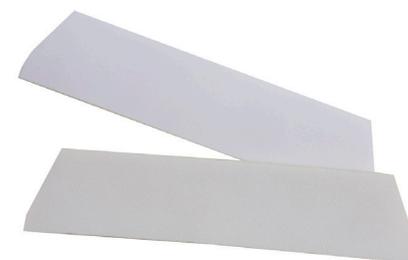

TBLVKMOPIR

Recycle Symbols



Technical Data

Attribute (units)	Typical Value	Test Method
Mop weight, dry; (g)	51	CTM004-03
Sorbent capacity; (mL/mop)	781	CTM004-03
Particles $\geq 0.5\mu\text{m}$; ($\times 10^6/\text{mop}$)	4.2	CTM006-01
Fibers $\geq 100\mu\text{m}$; ($\times 10^3/\text{mop}$)	0.152	CTM006-01
Mop frame	BLMOP	

Packaging	EA/OB1	OB1/CS	EA/CS
BLVKMOP	4	8	32
TBLVKMOP	4	8	32

	EA/OB1	OB1/OB2	OB2/OB3	EA/CS
BLVKMOPIR	1	4	7	28
TBLVKMOPIR	1	4	7	28

EA = each; OB = outer bag 1/2/3; CS = case

Notes

- The data shown are typical values and should not be used as product specifications.
- Valid product comparisons may only be obtained through side-by-side testing in the same test facility, under similar conditions.
- Current and/or comparison data may be available. Please contact a Contec sales representative for details.

Test Methods

- CTM = Refers to Contec Test Method.
- Mop coverage data is based on mop head applying solution such that the mopped surface is visibly wetted across the full mop path with no dry streaking observed, under controlled conditions. It is the responsibility of the user to determine appropriate coverage to ensure surfaces are visibly wet for the contact time required for their specific solution.