

# Contec® Healthcare PeridoxRTU®

## Broad spectrum EPA-registered disinfectant and hard surface cleaner

PeridoxRTU® eliminates and prevents the spread of spores, such as *C. difficile*, as well as more than 40 other pathogens like MRSA and ESKAPE pathogens - Vancomycin Resistant *Enterococcus faecalis* (VRE), *Staphylococcus aureus*, *Klebsiella pneumoniae*, *Acinetobacter baumannii*, *Pseudomonas aeruginosa*, and *Enterobacter aerogenes*. PeridoxRTU requires no rinsing and leaves minimal resident on surfaces.

This unique hospital grade sporicide, disinfectant and cleaner is ideal for use in pharmacy compounding areas to meet the requirements of USP <797> and USP <800>. Compatible with stainless steel, PeridoxRTU can be used daily in the ISO Class 5 compounding area, buffer zones, and anterooms. Ideal for hazardous drug removal and decontamination.

According to the Centers for Disease Control and Prevention, EPA-registered disinfectants with a sporicidal claim have been used with success on environmental surface disinfection in patient care areas.


\*Follow manufacturer's suggested instructions.



**3 MINUTES**  
PeridoxRTU®  
(*C. difficile*)

**5 MINUTES**  
Diluted Sodium  
Hydrochlorite Solution

**10 MINUTES**  
Alternative H2O2 Solution

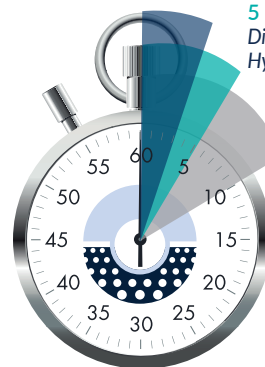

## Experience the power of PeridoxRTU, a Sporicide, Disinfectant and Cleaner.

### Power that lasts

Patented, hyperactive chemistry provides fast results. With its shorter kill times and powerful wetting agents PeridoxRTU stays wet and works faster. The result; assured efficacy against hard-to-kill spores and other dangerous pathogens every time you clean and disinfect.

### Cost-effective non-bleach cleaner and disinfectant

PeridoxRTU provides maximum effectiveness without damage to stainless steel, LCD screens, pharmacy equipment, clothing, carpet and other surfaces, as well as eliminates handling and mixing concentrated chemistries by pharmacy staff. PeridoxRTU's proprietary formulation contains surfactants for cleaning efficiency along with corrosion inhibitors for surface protection. In addition, PeridoxRTU saves time and labor cost as it does not require rinsing and drying of surfaces.

### Personal Protective Equipment (PPE)

Wear appropriate glove and eye protection. Additional PPE may be required based on engineering controls/environment, method of application, and use protocols.

## Product Specifications

Odor	Vinegar
Wetting Ability	Excellent
Freeze/Thaw	Stable
EPA-Registered*	Yes
% Hydrogen Peroxide	4.40%
% Peroxyacetic Acid	0.23%
Detergency	Excellent
Density	1.02 g/mL 8.51 lbs/gal
pH	1.9-2.2 at 20°C
Shelf Life (chemical potency)	
RTU and Sterile RTU (opened)	6 months
RTU and Sterile RTU (unopened)	2 years
HMIS Hazard Rating	
Health	2
Flammability	0
Reactivity	0
Personal Protection**	X

Complete efficacy data available for download at [healthcare.contecinc.com](http://healthcare.contecinc.com).

\*EPA #8383-13

\*\*See SDS for detailed information.



All bottles are sealed in plastic.

Part no.	Description	Size	Packaging
HC85335	Contec Healthcare PeridoxRTU Flip-top cap	32 oz. (0.95 L)	6/case
HC85336	Contec Healthcare PeridoxRTU	1 gallon (3.8 L)	4/case
HC85335IR	Contec Healthcare Sterile PeridoxRTU Flip-top cap	32 oz. (0.95 L)	6/case
HC85336IR	Contec Healthcare Sterile PeridoxRTU	1 gallon (3.8 L)	4/case

