

# Contec® Polyester Tack Cloth


## Knitted, sealed edge polyester tack cloth

Developed with knitted selvage edges and heat sealed to reduce snags and fibers, only our tack cloth is manufactured using a high temperature and pressure tack 'thermoset' impregnation process. This process significantly reduces invisible residue buildup that may react with other finishing materials to cause coating defects such as marring and streaking. Ideal for industrial tack applications and suitable for Class A paint automotive surfaces. Tack cloths from Contec are VOC-free. Custom sizes/tack level combinations are available.

20 Cloth



80 Cloth

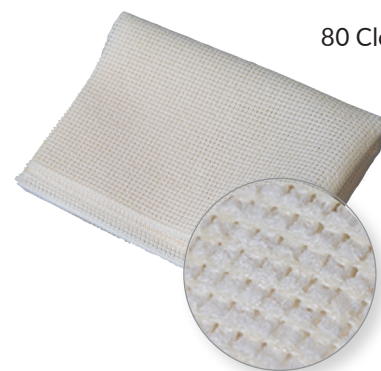

Tack Formula Options		
Gold Standard (GS)	Gold Standard is a proprietary formula made with natural colored resins specifically designed for the automotive and wood finishing professional.	
BS/BWS	This tack is designed for base coat/clear coat paint preparation. BWS offers a compromise between the 'wetter' tack of the Gold standard and the 'dry' tack of Lite & Dry® for a perfect finish every time. BWS is available with extra tack.	
Lite & Dry® (LD)	This tack formula offers a unique combination of dirt pick-up, transfer resistance and heat stability. This makes Lite & Dry the brand of choice for all warm surface applications such as pressed laminates, molded thermoplastic parts and oven cured coatings.	
Cloth Code Options	Example Part No.	Description
20	BS20CB-12	100% polyester knit low nap fabric. Smooth texture on both sides of the cloth.
28	GS28CB	100% cotton mesh fabric.
80	BS80CB	100% polyester knit high nap fabric. Textured, high nap feel on both sides of the cloth increases dirt collecting surface area of the filaments and improves penetration into surface irregularities during wiping.

Part no.	Description	Size	Packaging
20CSG	Lite & Dry®	9" x 18" (230 x 460 mm)	100/bag; 95 bags/gaylord
WS28RL	White Standard (Medium) Cotton	36" x 150 yards (914 mm x 137 M)	1/case
GS20CB	Gold Standard (Medium) Tack	9" x 18" (230 x 460 mm)	100/bag; 5 bags/case
GS2824PB	Gold Standard (Medium) Tack	18" x 36" (460 x 914 mm)	1/bag; 100 bags/case
GS28CB	Gold Standard (Medium) Tack	18" x 36" (460 x 914 mm)	100/bag; 5 bags/case
BS20CB-LT	Standard (Light) Tack	9" x 18" (230 x 460 mm)	100/bag; 5 bags/case
BS20CB6/9	Standard (Medium) Tack	6" x 9" (152 x 230 mm)	100/bag; 10 bags/case
BS20CB-12	Standard (Medium) Tack	9" x 12" (230 x 305 mm)	100/bag; 5 bags/case
BS20CB-12GY	Standard (Medium) Tack	9" x 12" (230 x 305 mm)	100/bag; 1,800 each/case
BS20CB-16	Standard (Medium) Tack	9" x 16" (230 x 406 mm)	100/bag; 5 bags/case
BS20CS	Standard (Medium) Tack	9" x 18" (230 x 460 mm)	100/bag; 5 bags/case
BS20CB-60	Standard (Medium) Tack	9" x 60" (230 x 1524 mm)	36/bag; 7 bags/case
BS20CB1428GY	Standard (Medium) Tack	14" x 28" (356 x 711 mm)	36/bag; 4,320 each/case
BS20CB24/54	Standard (Medium) Tack	24" x 54" (609 x 1371 mm)	15/bag; 4 bags/case
BS20CS24/72	Standard (Medium) Tack	24" x 72" (609 x 1828 mm)	12/bag; 10 bags/case
BS20RL24/50	Standard (Medium) Tack	24" x 50 yards (609 mm x 45.7 M)	2/gaylord
BS80CB-12	Standard (Medium) Tack	9" x 12" (230 x 305 mm)	100/bag; 4 bags/case
BS80CB-12GY	Standard (Medium) Tack	9" x 12" (230 x 305 mm)	100/bag; 10,400 each/case
BS80-16	Standard (Medium) Tack	9" x 16" (230 x 406 mm)	100/bag; 4 bags/case
BS80CB	Standard (Medium) Tack	9" x 18" (230 x 460 mm)	100/bag; 4 bags/case
BS80CB-GY	Standard (Medium) Tack	9" x 18" (230 x 460 mm)	100/bag; 6,400 each/case
BS80CB-24GY	Standard (Medium) Tack	9" x 24" (230 x 609 mm)	100/bag; 6,400 each/case
BS80CBXT12GY	Standard (Heavy) Tack	9" x 12" (230 x 305 mm)	100/bag; 10,400 each/case